

# **Smart Pass Management Platform**

## **User Manual**

### **V 2.3.0**

## Contents


1.Chapter One Installation and Login.....	5
2.Chapter Two Console.....	7
3.Chapter Three Device Management.....	8
3.1 Device list.....	8
3.1.1 Parameter settings .....	8
3.1.2 Power control.....	9
3.1.3 Body temperature test.....	9
3.1.4 Client upgrade .....	10
3.1.5 Volume settings.....	11
3.1.6 Auto-start.....	11
3.1.7 Application daemon .....	12
3.1.8 Open the door remotely .....	12
3.1.9 Delete.....	12
3.1.10 Move group.....	13
3.1.11 Personalize list.....	13
3.1.12 Device details.....	14
3.1.13 Device monitoring .....	15
3.1.14 Grouping operation in Bulk.....	16
3.1.15 Device grouping management .....	17
3.2 APK list .....	17
3.2.1 Delete APK .....	17
3.2.2 New APK .....	18
4.Chapter Four Personnel Management.....	19
4.1 Employee list.....	19
4.1.1 Add employee information individually.....	19
4.1.2 Import employee information in bulk.....	21
4.1.3 Import portrait photos in bulk.....	22
4.1.4 Export employee information .....	23
4.1.5 Refresh employee information .....	23
4.1.6 Staff details and editing .....	23
4.1.7 Employee grouping management.....	25
4.2 Visitor management.....	25
4.2.1 Add visitor individually.....	26
4.2.2 Export visitor information.....	28
4.2.3 Refresh visitor information.....	28
4.2.4 Visitor details and editing.....	28
4.2.5 Visitor grouping management .....	30
4.3 Blacklist management.....	30
4.3.1 Add blacklist individually .....	31
4.3.2 Export blacklist .....	32
4.3.3 Refresh blacklist information.....	32
4.3.4 Blacklist details and editing .....	32
4.3.5 Blacklist grouping management .....	34
5.Chapter Five Pass Management.....	35

5.1 Pass records.....	35
5.2 Pass permission.....	35
5.2.1 Employee pass permission settings .....	36
5.2.2 Visitor pass permission settings .....	37
5.2.3 Revoke permission .....	39
5.2.4 Refresh permission information .....	40
5.3 Blacklist monitoring.....	40
5.3.1 Blacklist monitoring settings.....	40
5.3.2 Identification record query .....	42
5.3.3 Remove monitoring.....	42
5.4 Permission records.....	43
6.Chapter Six System Management .....	45
6.1 Group structure.....	45
6.1.1 Attribution of business data .....	45
6.1.2 Group management .....	46
6.1.3 User management.....	46
6.2 Role management.....	47
6.3 Business management.....	48
6.4 System log .....	49
6.5 System setting .....	50
7.Chapter Seven Attendance Management .....	50
7.1 Attendance rules.....	50
7.1.1Shift settings.....	51
7.1.2 Holiday settings .....	52
7.1.3 Public holiday settings.....	52
7.1.4 Device group settings .....	53
7.2 Attendance records .....	54
7.3 Attendance statistics .....	56
8.Chapter Eight Client Functions .....	58
8.1 Client login.....	58
8.2 Application settings.....	59
8.2.1 Device name setting.....	60
8.2.2 Body temperature setting .....	61
8.2.3 Identification parameter setting.....	62
8.2.4 Volume setting .....	63
8.2.5 Start-up settings .....	63
8.2.6 Application information settings .....	64
8.2.7 Recognition effect display.....	64
8.2.8 Application password settings.....	65
8.2.9 Camera preview resolution setting .....	66
8.2.10 Screen-saver brightness setting .....	66
8.2.11 Device restart time setting.....	67
8.2.12 Relay settings.....	67
8.2.13 Others.....	68
8.2.14 Application initialization .....	69
8.3 Face portrait entry .....	69

8.4 Personnel import in bulk .....	70
8.5 Pass records.....	72
8.6 Application information.....	73
8.7 Face database .....	73
8.8 Identify the home page.....	73
8.9 Others.....	74


# 1. Chapter One Installation and Login

- One-click installation: Double-click the exe installation file and follow the installation instructions for quick installation.

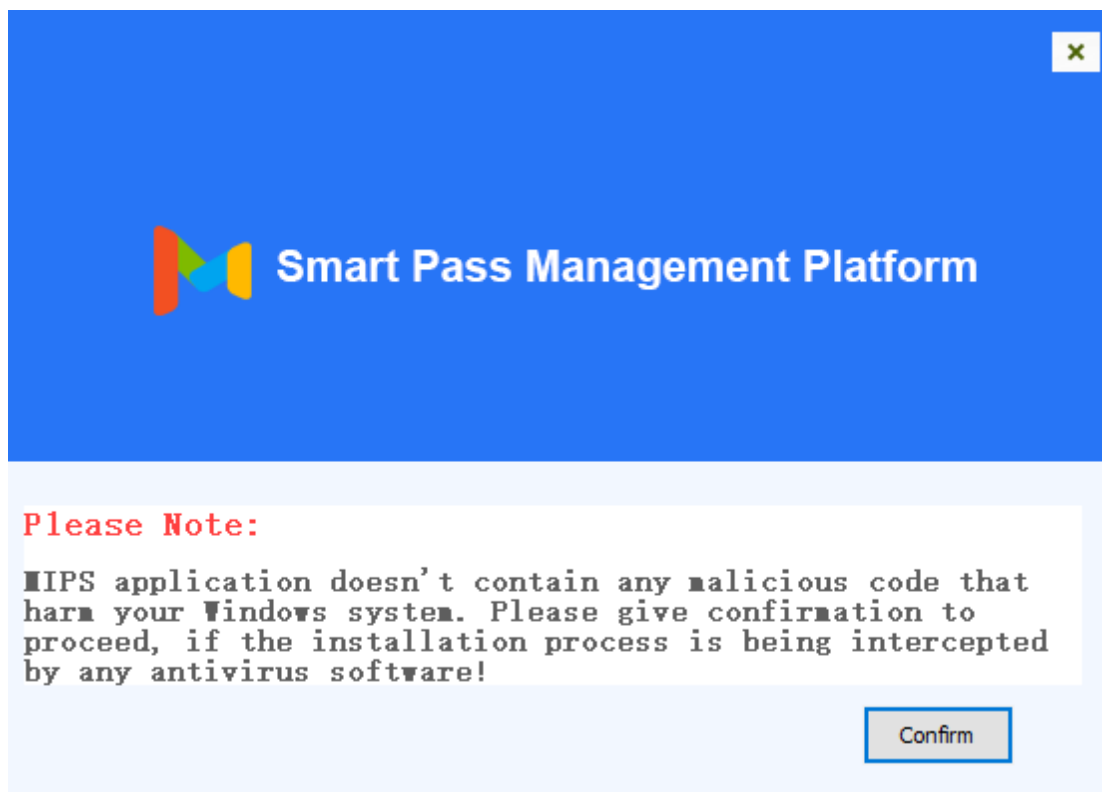

Note: If the installation process is blocked by a system firewall or third-party antivirus software, always choose to allow the program to operate. Otherwise, the installation process may fail and become unusable.


- After the program is installed, the application service is automatically started by default.
- After the start-up is complete, click the "Copy" button. Open the chrome browser and paste the link to open the application service background. Enter your username and password to log in. (The default user name: admin password: 123456)

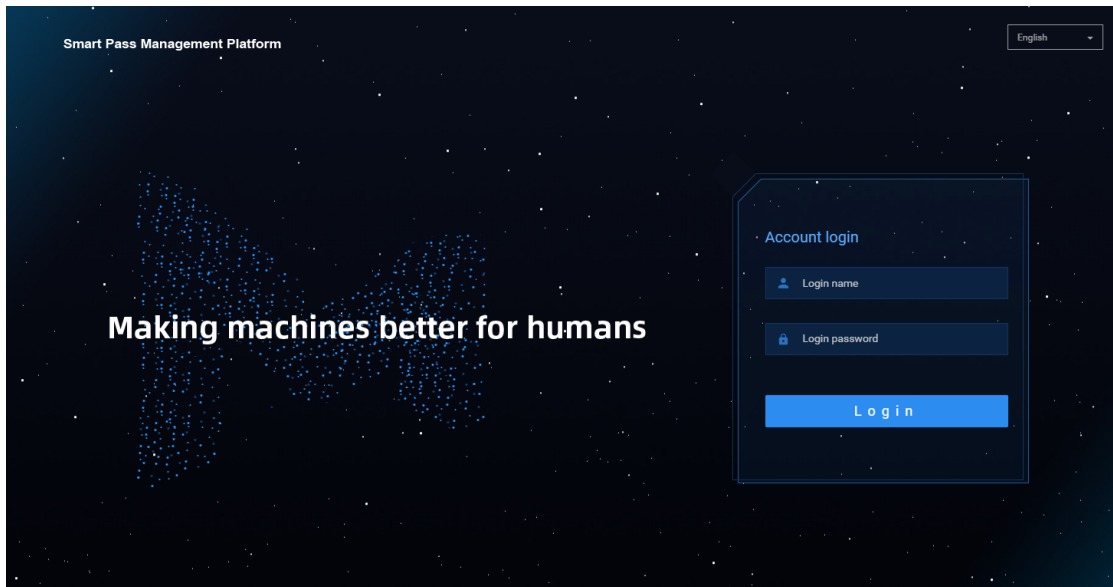

- 
- Application system upgrade: You only need to overwrite and install the application system software version installation package higher than the current version.

## 2.Chapter Two Console

It provides an overview of the number of devices and online status; statistics on the face scan (total face scan, employee face scan, visitor face scan, stranger face scan); today's pass and real-time monitoring (employees, visitors, blacklists, and body temperature); and provides quick access to view details.

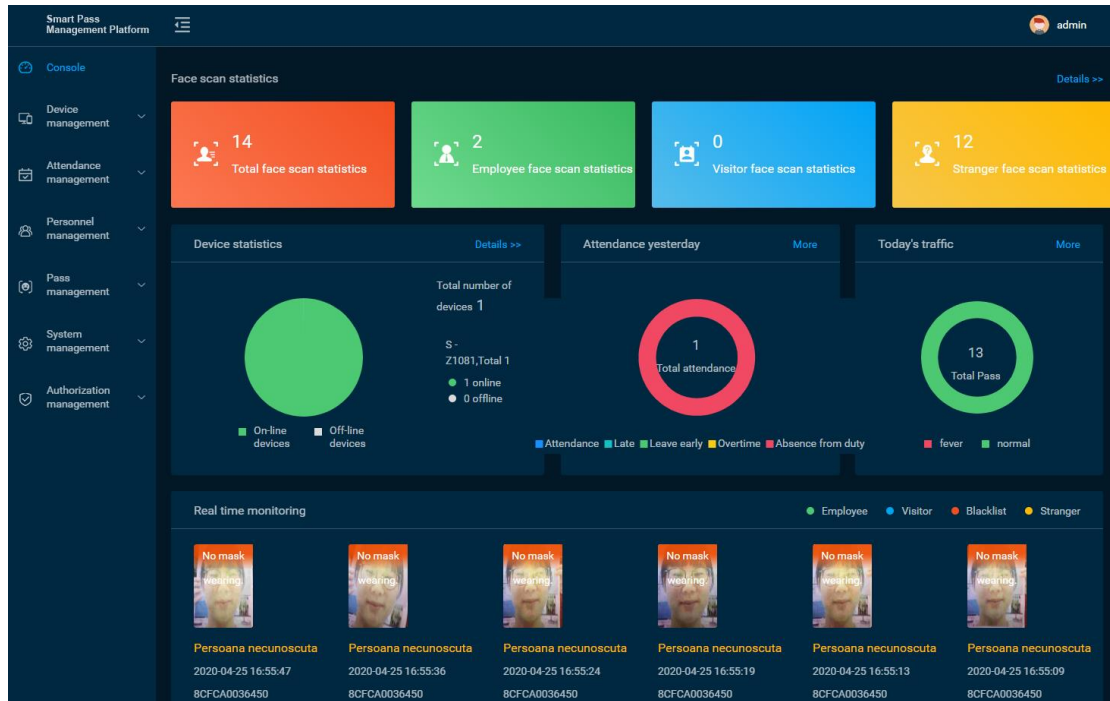

## 3.Chapter Three Device Management

### 3.1 Device list

[Device List] It contains information of all the devices connected to the system. You can perform single, multiple, and grouping management operations on the device.

Device management / Device list

Operate -

Body temperature test Parameter settings Power control - More -

Device name Enter keyword to query Q

<input type="checkbox"/>	Device name	Access type	Online status	Version	IP address	MAC Address	Operate
<input type="checkbox"/>	8CFC A0038A43	Enter the gate	● Online	2.1.0.8	192.9.51.221	8CFC A0038A43	⋮ ⋮ ⋮ ⋮ ⋮
<input type="checkbox"/>	8CFC A0036372	Enter the gate	● Online	2.1.0.8	192.9.50.194	8CFC A0036372	⋮ ⋮ ⋮ ⋮ ⋮
<input type="checkbox"/>	8CFC A0035EFC	Enter the gate	● Online	2.1.0.8	192.9.51.1	8CFC A0035EFC	⋮ ⋮ ⋮ ⋮ ⋮

3 total 10Note/Page < > 1/1 > > 1 Page Jump

#### 3.1.1 Parameter settings

Select the specified device in [Device List] and click Parameter settings to configure the parameter information of the device, as shown in the figure below:



Parameter settings ✕

Company name: <input type="text" value="IC卡机器"/>	Voice mode: <input type="text" value="Broadcast name"/>
Password setting: <input type="text" value="q"/>	Voice personalize: <input type="text" value="(name)"/>
Similarity: <input type="text" value="80"/>	Display mode: <input type="text" value="Personalize"/>
Recognition interval: <input type="text" value="10000"/>	Display personalize: <input type="text" value="(name)"/>
Serial mode: <input type="text" value="No output"/>	Stranger voice mode: <input type="text" value="Stranger alarm"/>
Serial port personalize: <input type="text" value="(idcardNum)"/>	Stranger voice personalize: <input type="text" value="Stranger recognition"/>
Wiegand output: <input type="text" value="Output IC card numbersWG26"/>	Living identification level: <input type="text" value="Quick identification (recommend it when someone on duty)"/>
Relay control: <input type="text" value="Modes0"/> Delay: <input type="text" value="5"/>	Recognition distance: <input type="text" value="1.50"/>
Access type: <input type="text" value="Enter the gate"/>	IC card: <input type="text" value="Swipe the cards"/>
ID card: <input type="text" value="Off"/>	Red photo flood lamp: <input type="text" value="On"/>

### 3.1.2 Power control

Select the device in [Device list] and click "Shutdown", "Restart", and "Reset" under "Power Control" to remotely shut down, restart, and reset the device.

☰
caojian

Device management / Device list

Operate

- All group
- Default group

Delete Move groups

	Device name	Access type	Online status	Version	IP address	MAC Address	Operate
<input checked="" type="checkbox"/>	8CFCA0038A43	Enter the gate	● Online	2.1.0.8	192.9.51.221	8CFCA0038A43	⋮ ⚙️ 🔌 🔄 🗑️
<input type="checkbox"/>	8CFCA0036372	Enter the gate	● Online	2.1.0.8	192.9.50.194	8CFCA0036372	⋮ ⚙️ 🔌 🔄 🗑️
<input type="checkbox"/>	8CFCA0035EFC	Enter the gate	● Online	2.1.0.8	192.9.51.1	8CFCA0035EFC	⋮ ⚙️ 🔌 🔄 🗑️

3 total 10Note/Page 1/1 Page Jump

### 3.1.3 Body temperature test

Select the device in [Device list], or select the group, and click "Body temperature detection" to set the parameters of temperature detection: temperature detection switch (default on), alarm threshold (default 37.3) and alarm switch, compensation temperature (default + Value 0.3) and mask settings (default off).

### Temperature detection setting ✕

Body temperature test:  On  Off

Alarm threshold:

Alarm:  On  Off


Compensation temperature:

+(Suitable for normal or low temperature conditions)  
 -(Suitable for high temperature conditions)

Mask detection:  On  Off


### 3.1.4 Client upgrade

Select the device in [Device list] and click "More-Client upgrade" to enter the device software upgrade page. On this page, you can see the list of uploaded device software. Select the software version of the device to be upgraded and click the upgrade button to complete the device software upgrade operation. It supports online and offline upgrade operations.

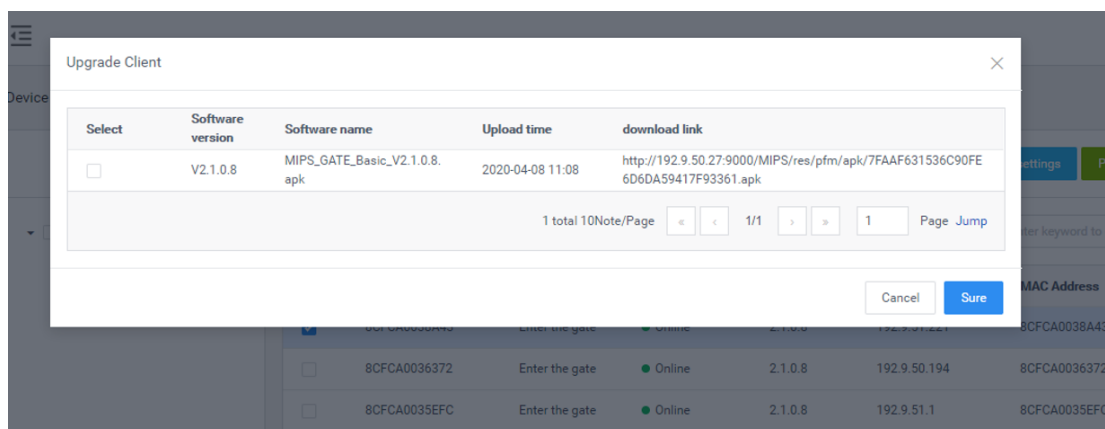


### 3.1.5 Volume settings

- 1) General settings: Select the device in the [Device List] and click "More-Volume setting" to set the volume of the selected device. The volume value can be set between 0-100 and the default is 20.
- 2) Silent setting: Select the device in [Device list], click "More-Volume setting", and select "Silent mode" in the pop-up tab.

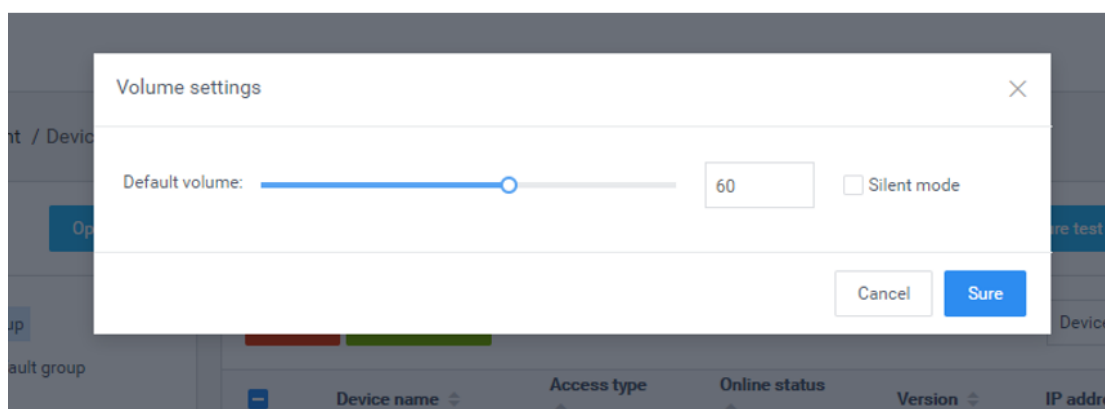


### 3.1.6 Auto-start

Auto-start: When enabled, the application will start at start-up, and when it is closed, it will not start at start-up. In [Device list], select the devices that need to be set to start automatically, and click the "More-Auto-start" button to enable or disable this function.

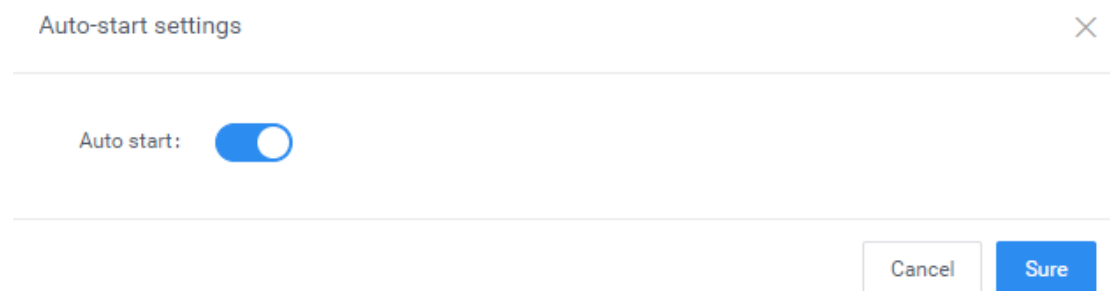

### 3.1.7 Application daemon

Application daemon: When this function is enabled, the application will automatically jump back to the playback interface within 1 minute after exiting the application page. When it is disabled, it will not automatically jump back. In [Device list], select the devices that need to set application daemon, and click the "More-Application daemon" button to enable or disable this function.

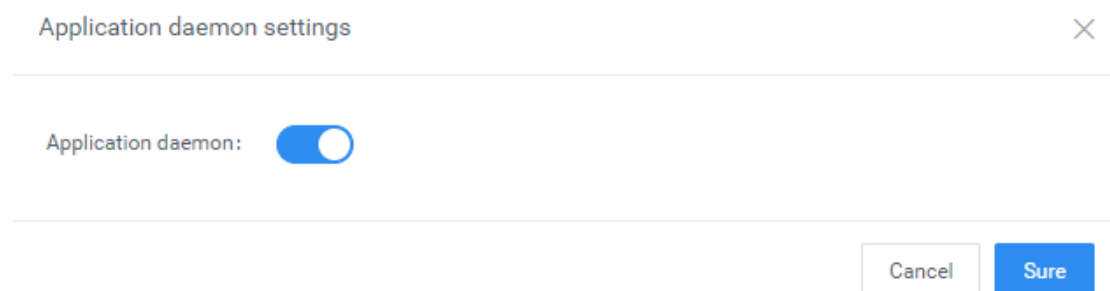

### 3.1.8 Open the door remotely


After corresponding to the device records in [Device list], click the "Open the door remotely" button to open the corresponding gate.

### 3.1.9 Delete

Select the device to be deleted in the [Device list] and click the "Delete" button to complete the delete operation. Only offline devices are supported. It supports single or multiple device operations.


### 3.1.10 Move group

In [Device list], select the devices that require mobile grouping, and click "Mobile Grouping". In the pop-up window, select the target group you want to move to, and you can complete the group move operation after you confirm it. It supports single or multiple device operations.

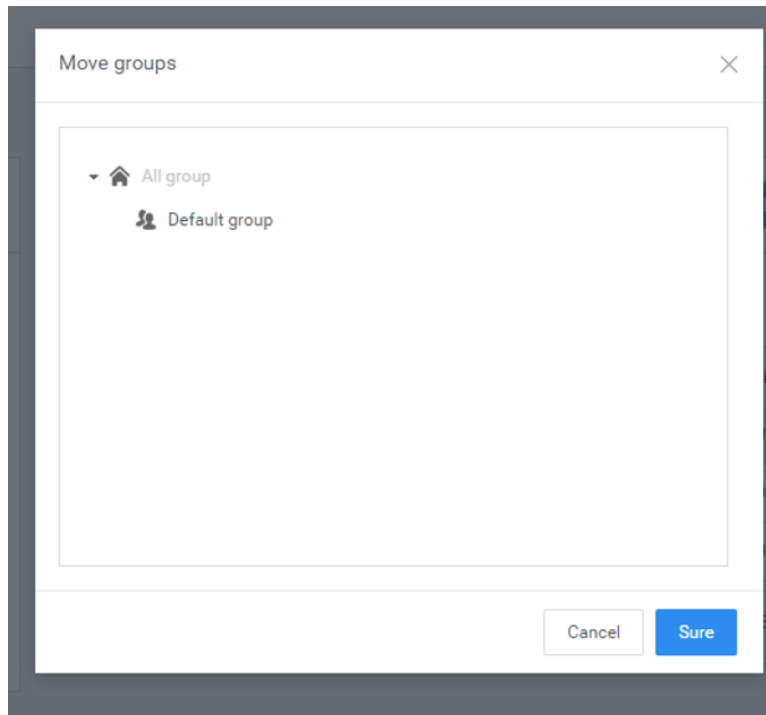

### 3.1.11 Personalize list

The information displayed in the list can be selected as needed in the Personalize list.

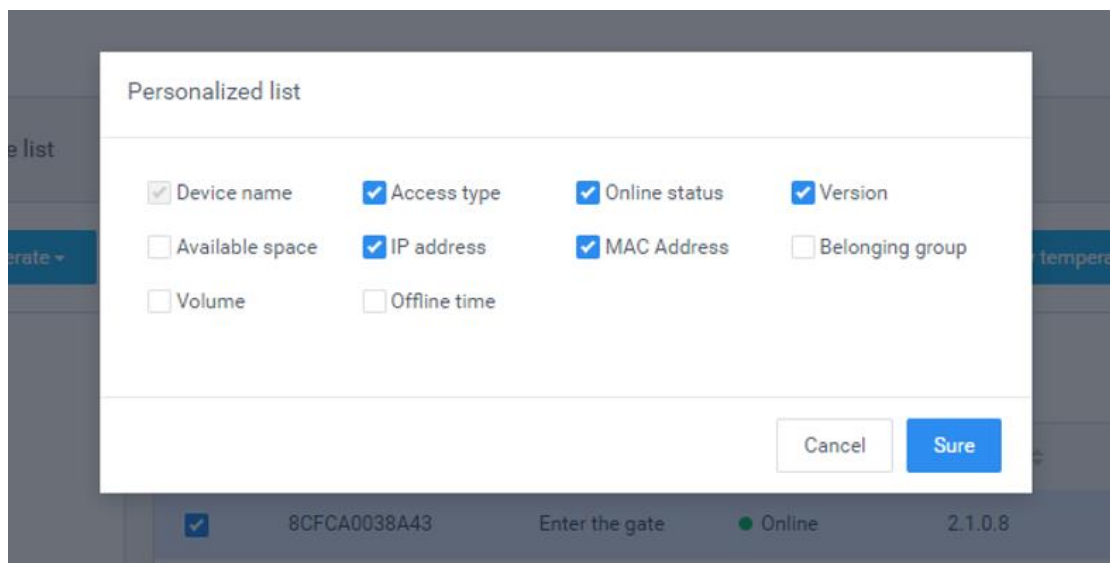

### 3.1.12 Device details

The device details include basic information, device settings, and remote operation.

- **Basic information:** View device information, edit device name, device address, etc.

The screenshot displays the 'Device details' page in the Smart Pass Management Platform. The breadcrumb navigation at the top reads 'Device management / Device list / Device details'. Below this, there are three tabs: 'Basic information' (which is active), 'Device settings', and 'Remote operation'. The main content area is titled 'Device information' and contains the following details:

Device name: 8CFC A0038A43	Access type: Enter the gate	Screen: 800*1280
device ID: 4	Motherboard model: rk3288	Firmware version: Android/rk3288/rk3288:7.1.2/NHG47K/wx103261100:userdebu keys
Software vision: V2.1.0.8	MAC: 8CFC A0038A43	IP address: 192.9.51.221
Available space: 3.90 GB		

Below the device information, there are three sections:

- Device group: 默认分组
- Device address: +
- Note: +

- **Device information:** You can view and modify device parameter information, display settings, and other settings.


Company name: IC卡阅读器	Password setting: q	Similarity: 80
Recognition interval: 10000	Serial mode: No output	Serial port personalize: {idcardNum}
Wiegand output: Output IC card numbersWG26	Relay control: Modes0 Delay 5	Access type: Enter the gate
Voice mode: Broadcast name	Voice personalize: (name)	Display mode: Personalize
Display personalize: (name)	Stranger voice mode: Stranger alarm	Stranger voice personalize: Stranger recognition
Living identification level: Quick identification (recommend it when ...)	Recognition distance: 1.50	IC card: Person & card comparison
ID card: Off	Red photo flood lamp: On	

[Save parameters](#)

---

Display settings

LOGO upload: Size is 256 x 256px; support jpg and png format; no more than 1M



[Modify](#) [Clear](#)

---

Other settings

Volume setting:  60  Silent mode

Body temperature test: [Body temperature test](#)

- Device operation: restart, shutdown, reset and remote door opening.

Device management / Device list / Device details


Basic information    Device settings    [Remote operation](#)

[Restart](#)    [Shut down](#)    [Reset](#)    [Open the door remotely](#)

### 3.1.13 Device monitoring

Device monitoring includes two parts: real-time monitoring and log monitoring.

- Real-time monitoring: You can view the device name and online status, and load and display the current screen of the device. You can also restart and shut down.

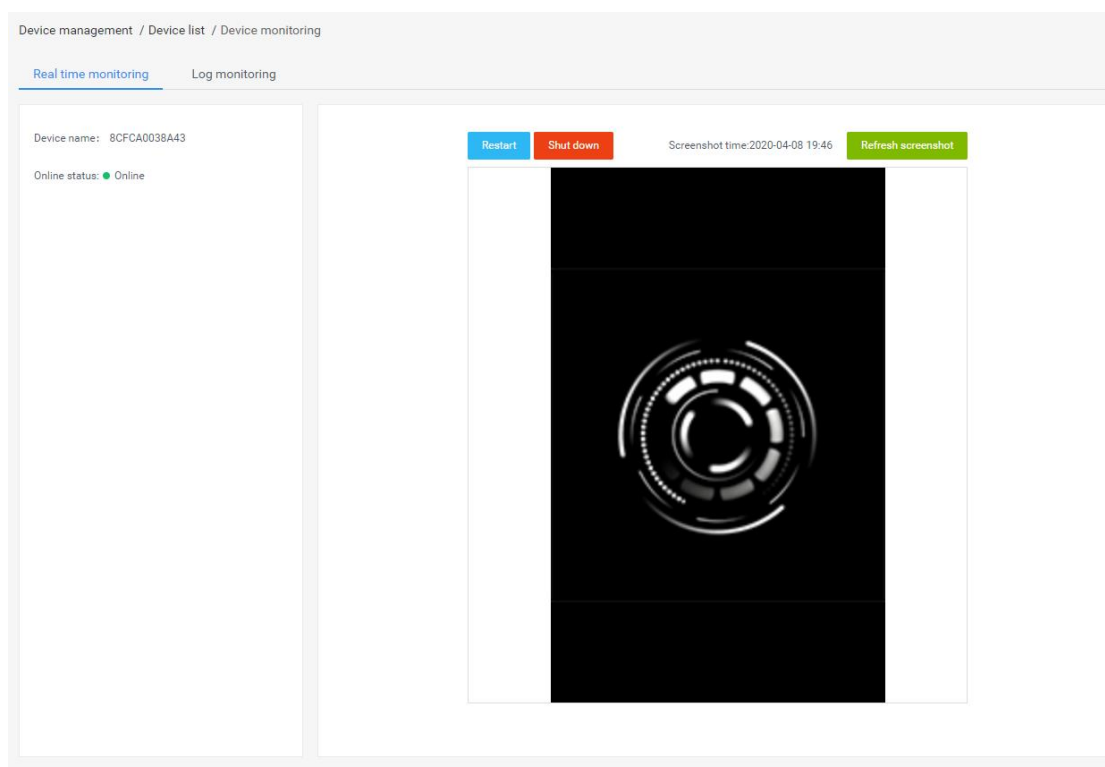

- Log monitoring: View related operation logs of the device.

Operation type	Operation content	Operating time	Operation result	Device reception time
截屏	设备操作截屏	2020-04-08 17:47:45	● Succeeded	2020-04-08 17:47:45
设备登录	设备重连	2020-04-08 17:40:31	● Succeeded	2020-04-08 17:40:32
设备登录	设备重连	2020-04-08 17:38:03	● Succeeded	2020-04-08 17:40:32
截屏	设备操作截屏	2020-04-08 17:25:31	● Succeeded	2020-04-08 17:25:31
截屏	设备操作截屏	2020-04-08 17:23:46	● Succeeded	2020-04-08 17:23:46
设备信息设置	设置闸机设备相关信息	2020-04-08 17:10:28	● Succeeded	2020-04-08 17:10:28
设备登录	设备重连	2020-04-08 15:58:57	● Succeeded	2020-04-08 17:40:31
设备离线	设备离线	2020-04-08 15:58:38	● Succeeded	2020-04-08 15:58:38
设备信息设置	设置闸机设备相关信息	2020-04-08 15:29:09	● Succeeded	2020-04-08 15:29:09
设备信息设置	设置闸机设备相关信息	2020-04-08 15:28:31	● Succeeded	2020-04-08 15:28:31

### 3.1.14 Grouping operation in Bulk

Batch operations can be performed in the device group by selecting the device group. It supports parameter setting, shutdown, restart, reset, client upgrade, volume setting, auto start and application daemon for the entire device group, as shown below:



If there is no device under the selected group, a prompt will pop up: there is no device under the selected group, please select again. If there are devices under the selected group, the original settings will be overwritten after the batch setting is prompted.


### 3.1.15 Device grouping management

Device grouping uses structure grouping by default. Each user group has a default device group. You can add, modify, and delete device groups on the user group. The operation is similar to the user grouping in [Group structure].

## 3.2 APK list


[APK list] The page contains client software list information and software version upload and delete operations.

### 3.2.1 Delete APK

Select the software version to be deleted in the APK list, and click .

### 3.2.2 New APK

Click **New APK** to open the [Version Upload] page, and upload software files on this page.

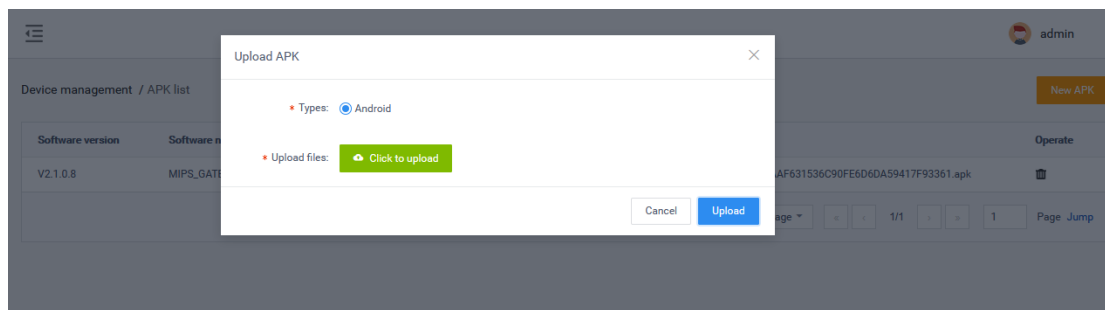

## 4.Chapter Four Personnel Management

### 4.1 Employee list

















The employee list is used to manage employee information, such as viewing, adding, editing, and exporting employee information. Employee information can be added individually or in bulk. The batch adding operation requires information import in bulk first, and then portrait import in bulk.

Personnel management / Employee list

Single addition Add in bulk Export

Refresh

Please enter personnel ID, name or phone number for fuzzy query. Q

<input type="checkbox"/>	Portrait photo	Employee ID	Name	Phone number	Email	Creation time	Operate
<input type="checkbox"/>		304	老 奶奶			2020-04-08 15:07:11	
<input type="checkbox"/>		303	cao jian	15000000005		2020-04-08 14:22:28	
<input type="checkbox"/>		302	gui xuan	15000000003		2020-04-08 11:44:21	
<input type="checkbox"/>		301	吴克军	15000000002		2020-04-08 11:38:44	
<input type="checkbox"/>		199	罗震丞	13823335504		2020-04-08 11:06:10	
<input type="checkbox"/>		193	江力兴	13612843310		2020-04-08 11:06:10	
<input type="checkbox"/>		192	杨鹏程	13590289322		2020-04-08 11:06:10	
<input type="checkbox"/>		191	史瑞君	13692269573		2020-04-08 11:06:10	

#### 4.1.1 Add employee information individually

Steps:

- 1) In [Employee list], click the "Single addition" button to enter the employee addition page;
- 2) Fill in the personnel ID, name, gender, belonging group, phone number, ID card number, IC card number, nationality, place of birth, date of birth, contact address and notes. Add a face recognition photo and click "Save" to complete the employee creation operation.


Personnel management / Personnel list / Single addition

\* Personnel ID:  Only supports numbers and in 1 ~ 9 characters

\* Name:  Support Chinese, English, numbers and in 1 ~ 32 characters

Genders:  Please make a selection.

Face recognition portrait:  
1. Please choose a front-and-bareheaded photo in the past three months, with clear and even-light image.:  
2. The recommended size is 640 px \* 480 px, and the size does not exceed 500kb. Only jpg and png file formats are supported.:  
3. Faces should account for more than 1/3 of the photo to avoid photo blurring, wearing sunglasses, excessive beauty, head rotation, etc.,

  
Portrait photo

\* Belonging group:  Please make a selection.


\* Phone number:  Please enter your phone number, the format is "+ xx-xxxxx" abroad.

Email:  Please input your email

ID number:  Support numbers, letters and in 15 or 18 characters

IC card number:  No more than 64 characters

Native place:  No more than 64 characters

Date of birth:  Please make a selection. 

Contact address:  No more than 128 characters

Note:  No more than 128 characters

## Upload a face recognition photo description

### ➤ Upload from local

Click "Upload from local" to open the local folder, select the jpg and png portrait photos in the folder.

#### Note: Portrait photo specifications

1. Please choose a front-and-bareheaded photo in the past three months, with a clear and even-light image.
2. The recommended size is 640 px \* 480 px, and the size does not exceed 500kb. Only jpg and png file are supported.
3. Faces should account for more than 1/3 of the photo, avoiding photo blurring, wearing sunglasses, excessive facial-up, and head rotations.


### ➤ Register from device

Click "Register from Device" to open the Select Device window and select an online device. Once determined, the device will enter the photo state. After the photo is taken and verified, the photo will be sent back here from the client.

## 4.1.2 Import employee information in bulk

Steps: In the [Employee list], click the "Add in Bulk - Information Import in Bulk" button.

- 1) First step, click "Download Template". Download the excel template file to your computer with the file name "Personnel\_import\_template.xls". Then fill in the employee information in bulk.
- 2) In the second step, click "Upload excel file". Select the excel file with the employee information filled in and upload it. If the file is uploaded successfully, the upload success status and file name will be displayed.
- 3) In the third step, click "Start import". During the import, there will be a progress bar showing "Importing personnel information (1 / total number of people)". After the import is completed, it prompts "Successful batch import of personnel information". After the import is completed, return to the [Person List] to view the imported personnel information.

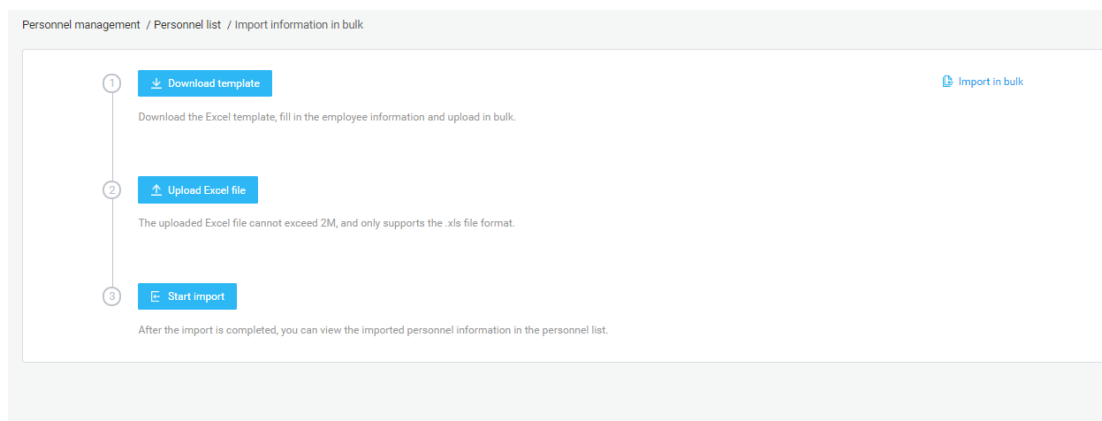

### Description of import method

- Import without overwriting: When importing a file two or more times, duplicate employees are not imported. And the system will prompt abnormal duplicate information.
- Overwrite import: The second import will overwrite the information of the employee that was imported for the first time without prompting for duplicate information.

### Description of import failure exception

- The content or format of the uploaded excel file is incorrect and does not meet the template specifications. Click to start the import, and a prompt will appear: "The file content or format is incorrect. Please fill in the employee information according to the template requirements."
- A field in the employee is malformed or should not be duplicated. After the import fails, the reason for the failure will be notified in a table. After modification, you can re-import.

### 4.1.3 Import portrait photos in bulk



Steps: In the [Employee list], click the "Add in bulk - Portrait import in bulk".

- 1) Step 1, click "Zip file selection" to open the Select Folder window and select the file upload. After the file upload is successful, the current file storage path is displayed.
- 2) Step 2, click "Start Import", and a progress bar will be displayed during the import: the number of imported files / the total number of folders. And there will be a prompt message: x sheets have been successfully imported, x sheets failed. After the import is complete, the progress bar displays: The portrait photos in this folder have been imported.

Personnel management / Personnel list / Import in bulk

**Portrait import rules:**

1. [Portrait file naming] The naming of the portrait file needs to correspond to the personnel ID. After the upload is successful, the corresponding person portrait information can be viewed in the person list.
2. [Format size limitation] Only supports zip files, and the size of each portrait file must not exceed 500K. Files that do not meet the requirements will not be imported.
3. [Portrait Restriction] Faces need to account for more than 1/3 of the photo. Please choose a front-facelless photo in the past three months. The avatar is clear and the light is uniform. Avoid the avatar cannot be used for face recognition.

- 1  Zip file selection  
Zip the named portrait photos in a specified folder, then select this zip file for import.
- 2  Start import  
After importing, you can view the imported portrait information in the personnel list.

### Description of portrait import rules:

- [Portrait file naming] The naming of the portrait file needs to correspond to the personnel ID. After the upload is successful, the corresponding person portrait information can be viewed in the person list.
- [Format and size] Only two file formats of jpg and png are supported, and the size of each portrait file must not exceed 500k. Files that do not meet the requirements will not be imported.
- [Portrait Restriction] Faces need to account for more than 1/3 of the photo. Please choose a

front-facing photo in the past three months. The avatar is clear and the light is uniform. Avoid the avatar that cannot be used for face recognition.

- [Select Folder Upload] After the above conditions are met, place the named portrait photos in the specified folder and select the folder to import.

#### Description of failed portrait import

- If the size of an image file does not meet the requirements, the import will fail. After that, a table will appear to display the information of the portrait file that has not been successfully imported. After modification, you can re-import.

### 4.1.4 Export employee information

In [Employee list], click the "Export" button to export all employee information in the list to the file "Employee Information.xls" and download it.

### 4.1.5 Refresh employee information

In [Employee list], click the "Refresh" button to refresh all employee information in the list to the latest state.

### 4.1.6 Staff details and editing

- **Employee details**

In [Employee list], after corresponding employee information, click the "Employee details" button, you can enter the details page to view specific employee information.

Personnel management / Personnel list / Employee details


\* Personnel ID: 304

\* Name: 老 奶奶

Genders: Female

Face recognition portrait:

1. Please choose a front-and-bareheaded photo in the past three months, with clear and even-light image.;
2. The recommended size is 640 px \* 480 px, and the size does not exceed 500kb. Only jpg and png file formats are supported.;
3. Faces should account for more than 1/3 of the photo to avoid photo blurring, wearing sunglasses, excessive beauty, head rotation, etc..



\* Belonging group: Default group

\* Phone number:

Email:

ID number:

IC card number:

Native place:

Date of birth:

Contact address:

Note:

### ● Employee edit

On the details page, click the edit button to modify the employee's basic information and photo information. After modifying the information, click Save.



Personnel management / Personnel list / Employee details


\* Personnel ID:

\* Name:

Genders:

Face recognition portrait:

1. Please choose a front-and-bareheaded photo in the past three months, with clear and even-light image.:
2. The recommended size is 640 px \* 480 px, and the size does not exceed 500kb. Only jpg and png file formats are supported.:
3. Faces should account for more than 1/3 of the photo to avoid photo blurring, wearing sunglasses, excessive beauty, head rotation, etc..



\* Belonging group:

\* Phone number:

Email:

ID number:

IC card number:

Native place:

Date of birth:

Contact address:


Note:

### 4.1.7 Employee grouping management

Employee grouping uses the organizational structure grouping by default. There is a default employee grouping under each user group. You can add, modify, or delete employee groupings on the user group by yourself. The operation is similar to the user grouping in [Group Structure].

## 4.2 Visitor management

Visitor management is used to view, add, edit, and export visitor information.

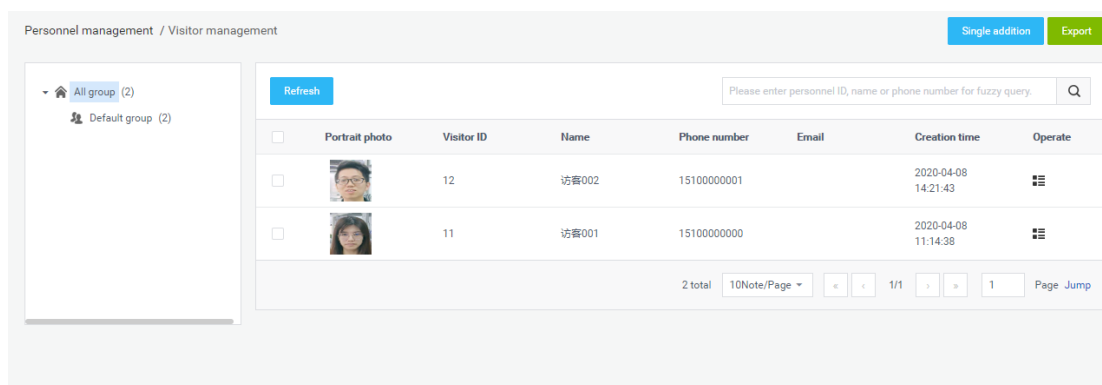

## 4.2.1 Add visitor individually

### Steps:

- 1) In [Visitor Management], click the "Single Add" button to enter the visitor adding page.
- 2) Fill in the visitor ID, name, gender, affiliation group, mobile phone number, ID card number, IC card number, ethnicity, nationality, date of birth, contact address and remarks, add face recognition photos and click "Save" to complete the visitor operation.

Personnel management / Visitor management / Single addition


\* Personnel ID:  Only supports numbers and in 1 – 9 characters

\* Name:  Support Chinese, English, numbers and in 1 – 32 characters

Genders:  Please make a selection.

Face recognition portrait:
 

1. Please choose a front-and-bareheaded photo in the past three months, with clear and even-light image.;
2. The recommended size is 640 px \* 480 px, and the size does not exceed 500kb. Only jpg and png file formats are supported.;
3. Faces should account for more than 1/3 of the photo to avoid photo blurring, wearing sunglasses, excessive beauty, head rotation, etc.,

 Portrait photo

\* Belonging group:  Please make a selection.


\* Phone number:  Please enter your phone number, the format is "+ xx-xxxxx" abroad.

Email:  Please input your email

ID number:  Support numbers, letters and in 15 or 18 characters

IC card number:  No more than 64 characters

Native place:  No more than 64 characters

Date of birth:  Please make a selection. 

Contact address:  No more than 128 characters

Note:  No more than 128 characters

## Upload a face recognition photo description

### ➤ Upload from local

Click "Upload from local" to open the local folder, select the jpg and png portrait photos in the folder.

#### Note: Portrait photo specifications

4. Please choose a front-and-bareheaded photo in the past three months, with a clear and even-light image.
5. The recommended size is 640 px \* 480 px, and the size does not exceed 500kb. Only jpg and png file are supported.
6. Faces should account for more than 1/3 of the photo, avoiding photo blurring, wearing sunglasses, excessive facial-up, and head rotations.

### ➤ Register from device

Click "Register from Device" to open the Select Device window and select an online device. Once determined, the device will enter the photo state. After the photo is taken and verified, the photo will be sent back here from the client.

## 4.2.2 Export visitor information

In [Visitor management], click the "Export" button to export all visitor information in the list to the file "Visitor information.xls" and download it.

## 4.2.3 Refresh visitor information

In [Visitor management], click the "Refresh" button to refresh all visitor information in the list to the latest state.

## 4.2.4 Visitor details and editing

- **Visitor details**

In [Visitor management], after corresponding visitor information, click the "Visitor details" button to enter the details page to view specific visitor information.

Personnel management / Visitor management / Visitor details


\* Personnel ID: 12

\* Name: 访客002

Genders: Male

Face recognition portrait:

1. Please choose a front-and-bareheaded photo in the past three months, with clear and even-light image.;
2. The recommended size is 640 px \* 480 px, and the size does not exceed 500kb. Only jpg and png file formats are supported.;
3. Faces should account for more than 1/3 of the photo to avoid photo blurring, wearing sunglasses, excessive beauty, head rotation, etc..



\* Belonging group: Default group

\* Phone number: 15100000001

Email:

ID number:

IC card number: 3710546244

Native place:

Date of birth:

Contact address:

Note:

### ● Visitor edit

On the details page, click the edit button to modify the visitor's basic information and photo information. After modifying the information, click Save.

Personnel management / Visitor management / Visitor details


\* Personnel ID:

\* Name:

Genders:

Face recognition portrait:

1. Please choose a front-and-bareheaded photo in the past three months, with clear and even-light image.;
2. The recommended size is 640 px \* 480 px, and the size does not exceed 500kb. Only jpg and png file formats are supported.;
3. Faces should account for more than 1/3 of the photo to avoid photo blurring, wearing sunglasses, excessive beauty, head rotation, etc.,



\* Belonging group:

\* Phone number:

Email:

ID number:

IC card number:

Native place:

Date of birth:

Contact address:


Note:

## 4.2.5 Visitor grouping management

Guest grouping uses the organizational structure grouping by default. Each user group has a default guest grouping, which can add, modify, and delete guest groups on the user grouping. The operation is similar to the user grouping in the [Group structure], which is not described in detail.

## 4.3 Blacklist management

Blacklist management is used to view, add, edit, and export blacklist information.

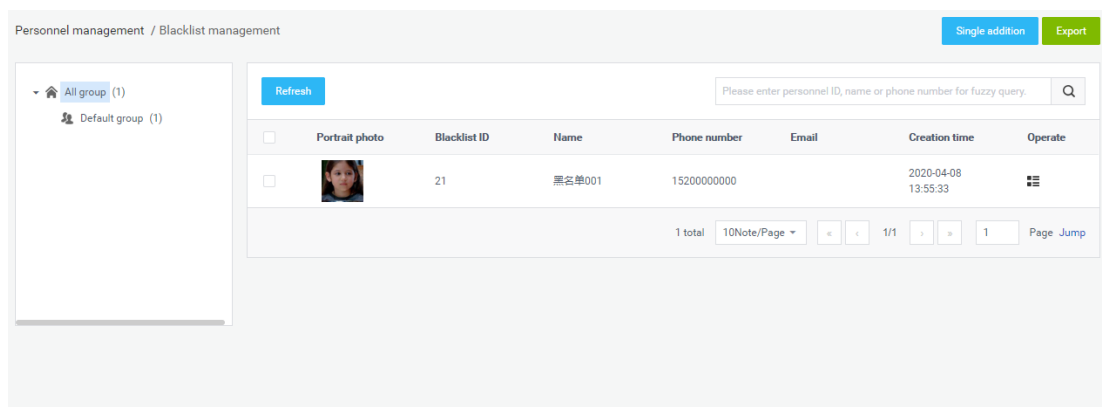

### 4.3.1 Add blacklist individually

#### Steps:

- 1) In [Blacklist management], click the "Single Add" button to enter the blacklist addition page.
- 2) Fill in the blacklist ID, name, gender, belonging group, phone number, ID card number, IC card number, ethnicity, birthplace, date of birth, contact address and remarks. Add face recognition photos and click "Save" to complete the blacklist create operation.

Personnel management / Blacklist management / Single addition

\* Personnel ID:  Only supports numbers and in 1 ~ 9 characters

\* Name:  Support Chinese, English, numbers and in 1 ~ 32 characters

Genders:  Please make a selection.

Face recognition portrait: 1. Please choose a front-and-bareheaded photo in the past three months, with clear and even-light image.; 2. The recommended size is 640 px \* 480 px, and the size does not exceed 500kb. Only jpg and png file formats are supported.; 3. Faces should account for more than 1/3 of the photo to avoid photo blurring, wearing sunglasses, excessive beauty, head rotation, etc..

Portrait photo

Back Save

#### Upload a face recognition photo description

##### ➤ Upload from local

Click "Upload from local" to open the local folder, select the jpg and png portrait photos in the folder.

**Note: Portrait photo specifications**

7. Please choose a front-and-bareheaded photo in the past three months, with a clear and even-light image.

8. The recommended size is 640 px \* 480 px, and the size does not exceed 500kb. Only jpg and png file are supported.

9. Faces should account for more than 1/3 of the photo, avoiding photo blurring, wearing sunglasses, excessive facial-up, and head rotations.

### **4.3.2 Export blacklist**

In [Blacklist management], click the "Export" button to export all the blacklist information in the list to the file "Blacklist information.xls" and download it.

### **4.3.3 Refresh blacklist information**

In [Blacklist management], click the "Refresh" button to refresh all the blacklist information in the list to the latest state.

### **4.3.4 Blacklist details and editing**

- **Blacklist details**

In [Blacklist management], after corresponding to the blacklist information, click the "Blacklist details" button to enter the details page to view the specific blacklist information.



Personnel management / Blacklist management / Blacklist details


\* Personnel ID: 21

\* Name: 黑名单001

Genders: Female

Face recognition portrait:

1. Please choose a front-and-bareheaded photo in the past three months, with clear and even-light image.;
2. The recommended size is 640 px \* 480 px, and the size does not exceed 500kb. Only jpg and png file formats are supported.;
3. Faces should account for more than 1/3 of the photo to avoid photo blurring, wearing sunglasses, excessive beauty, head rotation, etc.,



\* Belonging group: Default group

\* Phone number: 15200000000

Email:

ID number:

IC card number: 3455683028

Native place:

Date of birth:

Contact address:

Note:

- **Blacklist edit**

On the details page, click the edit button to modify the basic information and photo information of the blacklist. After modifying the information, click Save.

Personnel management / Blacklist management / Blacklist details


\* Personnel ID: 21

\* Name: 黑名单001

Genders: Female

Face recognition portrait:

1. Please choose a front-and-bareheaded photo in the past three months, with clear and even-light image.;
2. The recommended size is 640 px \* 480 px, and the size does not exceed 500kb. Only jpg and png file formats are supported.;
3. Faces should account for more than 1/3 of the photo to avoid photo blurring, wearing sunglasses, excessive beauty, head rotation, etc..

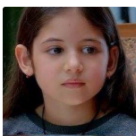

Upload from local Clear

\* Belonging group: Default group

\* Phone number: 15200000000

Email: Please input your email

ID number: Support numbers, letters and in 15 or 18 characters

IC card number: 3455683028

Native place: No more than 64 characters

Date of birth: Please make a selection.

Contact address: No more than 128 characters

Note: No more than 128 characters

Back Save

### 4.3.5 Blacklist grouping management

The blacklist group uses the organizational structure group by default. Each user group has a default blacklist group. You can add, modify, and delete blacklist groups on the user group. The operation is similar to the user grouping in [Group Structure].

## 5. Chapter Five Pass Management

### 5.1 Pass records

View all the identification records on the device, which can be grouped and filtered by device.

Any data body temperature value that is greater than or equal to 37.3 degrees will display red font, less than 37.3 degrees will display green font, no temperature data will display "none".

There are three passage states: normal body temperature, abnormal body temperature and no

Pass management / Pass records

Refresh
Date range: 

Q

Snap photo	Name	ID	Body temperature	Pass status	Device name	Access direction	Creation time
	访客002	Visitor	None	● No mask wearing.	8CFCAD0038A43	IC card	2020-04-08 17:09:20
	cao jian	Employee	None	● No mask wearing.	8CFCAD0038A43	IC card	2020-04-08 17:09:12
	cao jian	Employee	None	● No mask wearing.	8CFCAD0036372	Face recognition	2020-04-08 16:57:28
	cao jian	Employee	None	● Body temperature is normal.	8CFCAD0036372	Face recognition	2020-04-08 16:57:25
	cao jian	Employee	None	● Body temperature is normal.	8CFCAD0036372	Face recognition	2020-04-08 16:55:59
	cao jian	Employee	None	● Body temperature is normal.	8CFCAD0036372	Face recognition	2020-04-08 16:55:49
	cao jian	Employee	None	● Body temperature is normal.	8CFCAD0036372	Face recognition	2020-04-08 16:55:46
	cao jian	Employee	36.5°C	● Body temperature is normal.	8CFCAD0036372	Face recognition	2020-04-08

















### 5.2 Pass permission

Manage the access rights of added employees and visitors.

Pass management / Pass permission

Employee pass permission Visitor pass permission

Refresh Please enter personnel ID, name or phone number for fuzzy query.

<input type="checkbox"/>	Portrait photo	Portrait check status	Personnel ID	Name	ID	Phone number	Expiration date	Operate
<input type="checkbox"/>		Checked	304	老奶奶	Empl yee		Permanent	
<input type="checkbox"/>		Checked	302	gui xuan	Empl yee	1500000 0003	Permanent	
<input type="checkbox"/>		Checked	301	吴克军	Empl yee	1500000 0002	Permanent	
<input type="checkbox"/>		Checked	12	访客002	Visito r	1510000 0001	from 2020-04-08 00:00 to 2020-04-08 23:59	
<input type="checkbox"/>		Checked	303	cao jian	Empl yee	1500000 0005	Permanent	
<input type="checkbox"/>		Checked	11	访客001	Visito r	1510000 0000	from 2020-04-08 00:00 to 2020-04-08 23:59	
<input type="checkbox"/>		Checked	199	罗盛丞	Empl yee	1382333 5504	Permanent	
<input type="checkbox"/>		Checked	193	江力兴	Empl yee	1361284 3310	Permanent	

## 5.2.1 Employee pass permission settings

Steps: Enter the [Pass permission] page and click the "Employee Access Authorization" button.

### ● Pass permission

- 1) Select personnel, devices, pass permission and permanent effective time, and click "Save" button to start pass permission. After the device is successfully authorized, the person can pass the gate and the validity period is permanent.
- 2) Select personnel, devices, pass permission and temporary effective time, and click "Save" button to start pass permission. After the device is successfully authorized, the person can pass through the gate within the time range set by the validity period. If the validity period is exceeded, the recognition fails.

Pass management / Pass permission / Employee pass permission

Step one: **Employees selection**

<input type="checkbox"/>	EmployeeID	Name	Phone number	Creation time
No Data				

Step two: Device Selection

Alternative devices list 0/3

- All group
- Default group
  - 8CFCAD0038A43
  - 8CFCAD0036372
  - 8CFCAD0035EFC

Selected device list 0/0

### Description of Pass permission:

- **Click the Save button to start the pass permission. Present the current synchronization status, authorization progress, number of successes and failures of each device in the form of a list, and display device names.**
- **The person who failed the authorization is recorded in the "Verification Failure Description" table. You can click "Export Settings Failed Number" to export and view the authorization failure information.**
- **The person who fails the authorization, after modifying the corresponding failure information, can re-authorize until the authorization is successful.**

Pass management / Permission records / Permission details Export failed personnel information

Time: 2020-04-08 11:08:46      Types: Employee permission      Operator: admin

Device name	Permission progress	Number of failures	Number of successes
8CFCAD0035EFC	<div style="width: 100%; height: 10px; background-color: green;"></div> 121/121	2	119
8CFCAD0036372	<div style="width: 100%; height: 10px; background-color: green;"></div> 121/121	2	119
8CFCAD0038A43	<div style="width: 100%; height: 10px; background-color: green;"></div> 121/121	2	119

### ● Revoke pass permission

Select a person, select a device, de-authorize, and click the "Save" button to start revoking the permission. The de-authorization is the same as the "pass permission" logic, except that the selected person is removed from the selected device.

## 5.2.2 Visitor pass permission settings

Steps: On the [Pass permission] page, click the "Visitor pass permission" button.

## ● Pass permission

Select the visitor, select the device, pass permission and valid time range, and click the "Save" button to start the pass permission. After successful authorization on the device side, the visitor can pass the gate to be valid within the set effective time range.

Pass management / Pass permission / Visitor pass permission

Step one: **Visitor selection**

<input type="checkbox"/>	VisitorID	Name	Phone number	Creation time
No Data				

Step two: Device Selection

Alternative devices list 0/3

- Home All group
- Default group

Selected device list 0/0

Step three: Permission status selection

Pass permission ⓘ
  Revoke permission ⓘ

Start time: 2020-04-08  00:00

End time: 2020-04-08  23:59

### Description of pass permission:



- **Click the Save button to start the pass permission. Present the current synchronization status of each device in the form of a list, showing the device name, synchronization pass permission, number of successful and failed. The person who failed the permission is recorded in the "Verification Failure Description" table. You can click "Export Settings Failed Number" to export and view the permission failure information.**
- **Visitors who have failed authorization can revise the authorization after revising the corresponding failure information until the authorization is successful.**

- **Revoke pass permission**

Select personnel and equipment, and revoke the permission. Click the "Save" button to start. Revoke permission is the same as "Pass permission", except that the reassigned personnel are removed from the original equipment.

### 5.2.3 Revoke permission

In the authorized personnel list, you can click the "Revoke permission" button behind the list record to release the authorization. After the removal is successful, the corresponding employees and visitors will have no pass permissions. You can also check personnel records and click "Remove permissions" for batch operations.

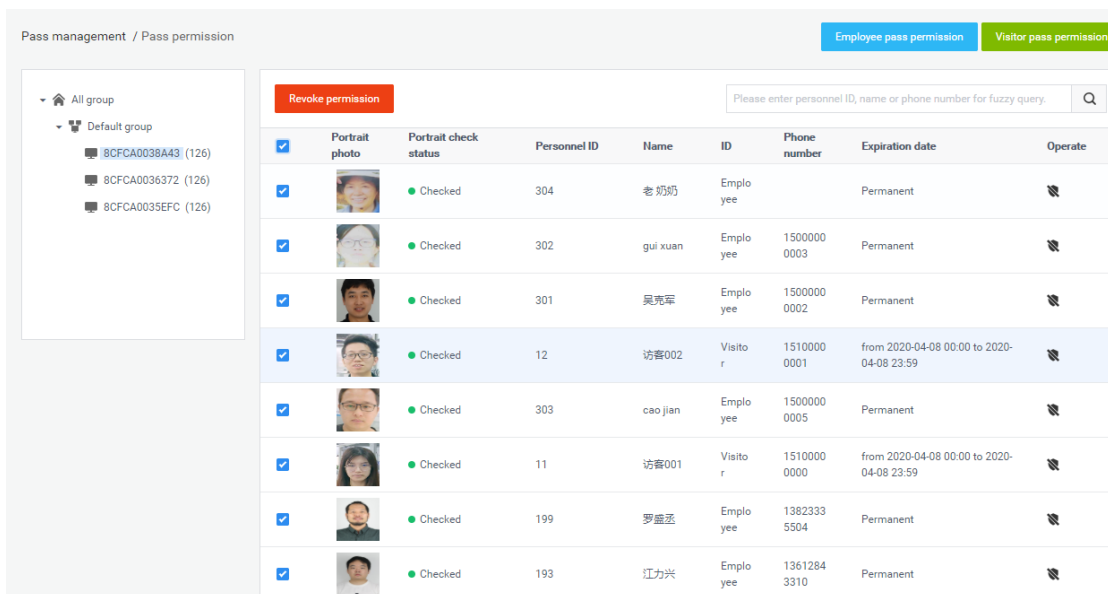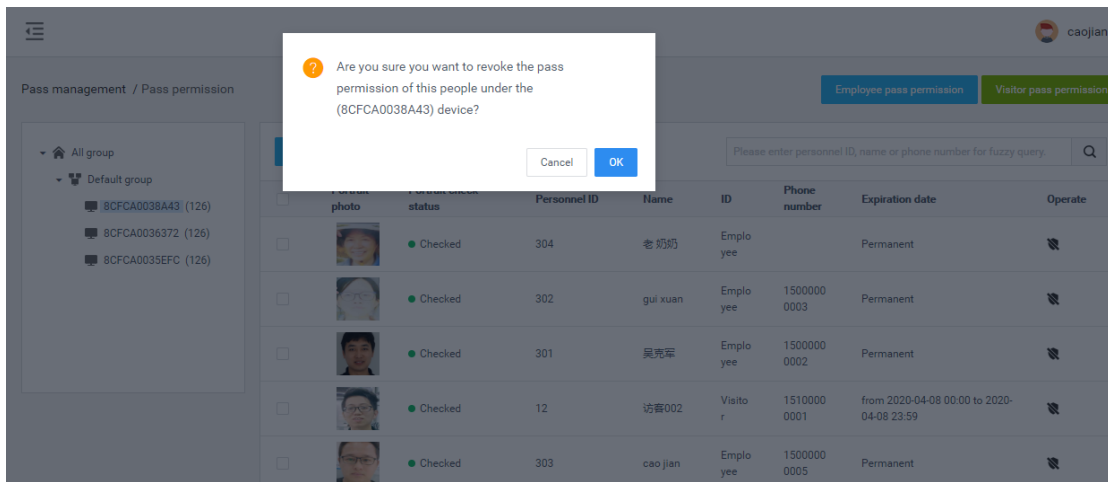

## 5.2.4 Refresh permission information

On the [Pass permission] page, click the "Refresh" button to refresh all authorized information in the list to the latest state.

## 5.3 Blacklist monitoring

### 5.3.1 Blacklist monitoring settings

Steps: Enter the [Blacklist monitoring] page and click the "Blacklist monitoring settings" button.

- **Blacklist monitoring settings**

- 1) Select the blacklist and device and snap to report. Click the "Save" button to start the blacklist monitoring. After the device is successfully monitored, the person will be recognized and captured when reporting through the gate.
- 2) Select the blacklist and device, choose to enable the snapshot report function, and enable the alarm sound. Click the "Save" button to start the blacklist monitoring. After the device is successfully monitored, the person will be identified through the gate, snapped to report and emit an alarm sound.



Pass management / Blacklist monitoring / Blacklist monitoring settings

Step one: **Blacklist selection**

<input type="checkbox"/>	BlacklistID	Name	Phone number	Creation time
No Data				

Step two: Device Selection

Alternative devices list 0/3

- All group
- Default group
  - 8CFC A0038A43
  - 8CFC A0036372
  - 8CFC A0035EFC

< Remove

Add >

Selected device list 0/0

Step three: Monitoring settings

Snapshot report ⓘ

Snapshot report and turn on alarm sound. ⓘ

Revoke blacklist monitoring ⓘ

Cancel Save

### Description of Pass permission:

- **Click the save to start the blacklist monitoring. Present the current synchronization status of each device in the form of a list, display the device name, synchronization monitoring progress, the number of successful and the number of failed. The monitoring failures are recorded in the "Export Blacklist Monitoring Failure Information" table. You can click the export table to view the monitoring failure information.**
- **Blacklist personnel who failed to monitor, after modifying the corresponding failure information, can re-monitor the settings until the monitoring registration is successful.**
- **Revoke blacklist monitoring**  
Select blacklist and device, and release blacklist monitoring. Click the "Save" button to start the release.











### 5.3.2 Identification record query

Enter the [Blacklist monitoring] page, click the "Identify Record Inquiry" button to enter the [Identify record inquiry] page, and display the identification records of all blacklist personnel. Blacklist identification records can be selected according to grouping, device, and date range inquiries.

Pass management / Blacklist monitoring / Identification records query

- 🏠 All group
- 👤 Default group



Date range:

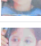Portrait photo	Personnel ID	Name	Phone number	Monitoring settings	Date recognition
	21	黑名单001	15200000000	Snapshot report and turn on alarm sound.	2020-04-08 17:09:25
	21	黑名单001	15200000000	Snapshot report and turn on alarm sound.	2020-04-08 15:05:21
	21	黑名单001	15200000000	Snapshot report and turn on alarm sound.	2020-04-08 15:05:13
	21	黑名单001	15200000000	Snapshot report and turn on alarm sound.	2020-04-08 15:05:01
	21	黑名单001	15200000000	Snapshot report and turn on alarm sound.	2020-04-08 14:59:28
	21	黑名单001	15200000000	Snapshot report and turn on alarm sound.	2020-04-08 14:57:06
	21	黑名单001	15200000000	Snapshot report and turn on alarm sound.	2020-04-08 14:56:53
	21	黑名单001	15200000000	Snapshot report and turn on alarm sound.	2020-04-08 14:56:25
	21	黑名单001	15200000000	Snapshot report	2020-04-08 14:55:33
	21	黑名单001	15200000000	Snapshot report	2020-04-08 14:54:10

15 total    1/2    Page Jump



### 5.3.3 Remove monitoring

In the blacklist monitoring personnel list, you can click the "remove monitoring" button behind the list record to release monitoring. After the removal is successful, the blacklist removes the snapshot monitoring or alarm from the selected device. You can also check the personnel record and click "remove monitoring" to perform batch operations.

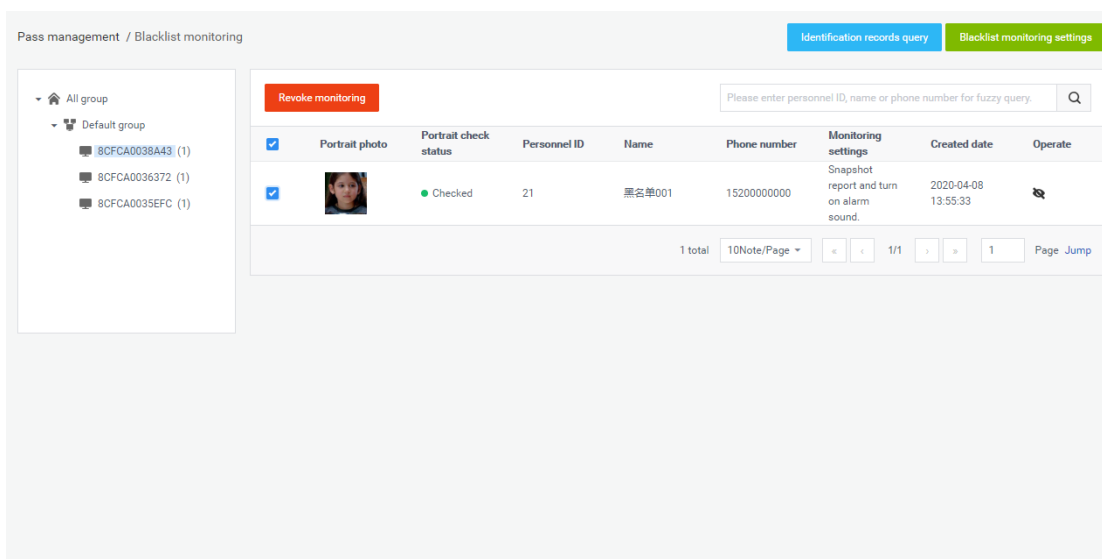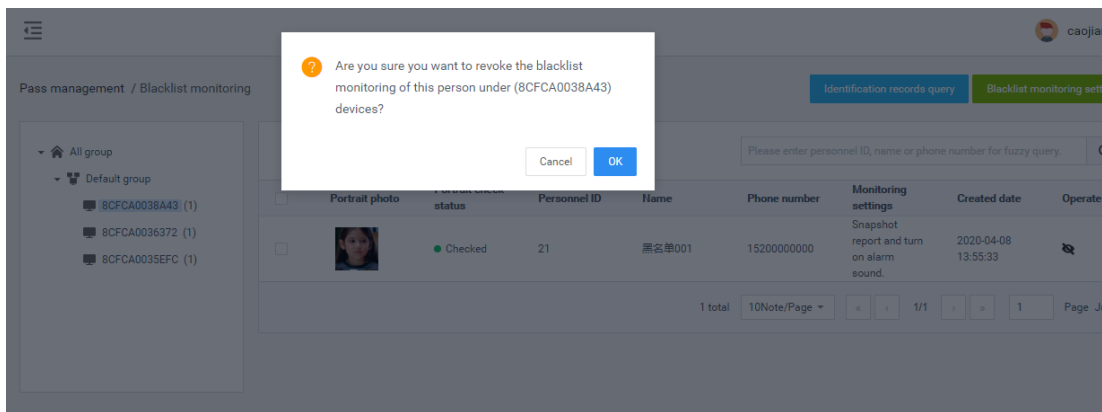

## 5.4 Permission records

[Permission records] The module contains the information records of the “Permission” and “Remove permission” of employees and visitors, as well as the blacklist monitoring and contact monitoring setting operations. You can enter the list to view the details of related records.

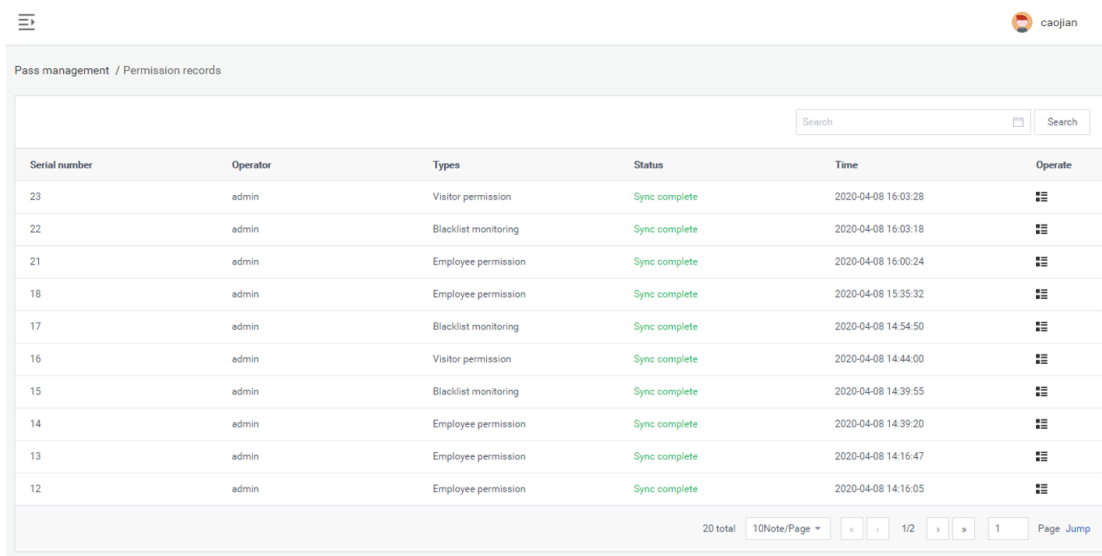




Pass management / Permission records

Serial number	Operator	Types	Status	Time	Operate
23	admin	Visitor permission	Sync complete	2020-04-08 16:03:28	
22	admin	Blacklist monitoring	Sync complete	2020-04-08 16:03:18	
21	admin	Employee permission	Sync complete	2020-04-08 16:00:24	
18	admin	Employee permission	Sync complete	2020-04-08 15:35:32	
17	admin	Blacklist monitoring	Sync complete	2020-04-08 14:54:50	
16	admin	Visitor permission	Sync complete	2020-04-08 14:44:00	
15	admin	Blacklist monitoring	Sync complete	2020-04-08 14:39:55	
14	admin	Employee permission	Sync complete	2020-04-08 14:39:20	
13	admin	Employee permission	Sync complete	2020-04-08 14:16:47	
12	admin	Employee permission	Sync complete	2020-04-08 14:16:05	

20 total    1/2

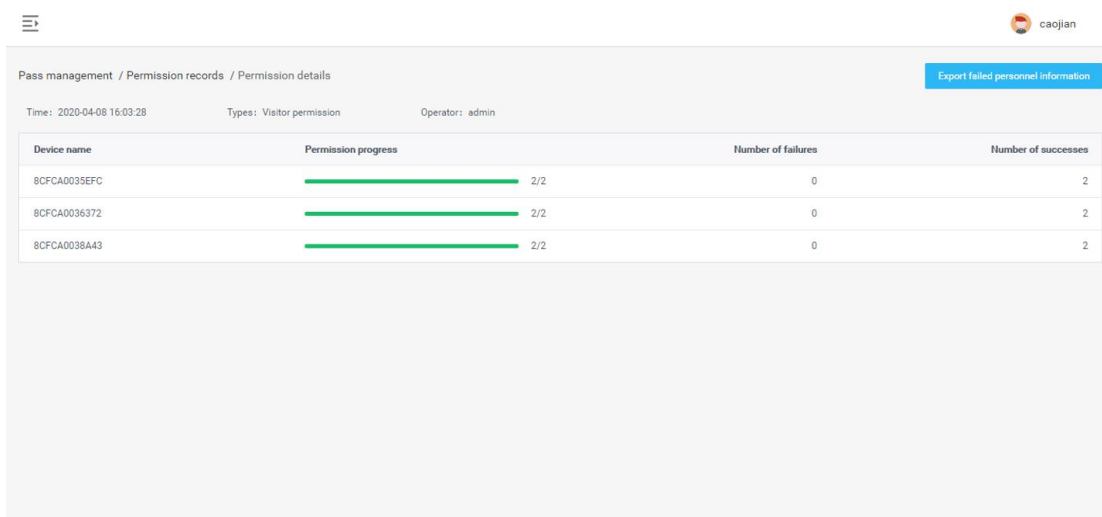Permission details are as follow:

Pass management / Permission records / Permission details [Export failed personnel information](#)


Time: 2020-04-08 16:03:28    Types: Visitor permission    Operator: admin

Device name	Permission progress	Number of failures	Number of successes
8CFCA0035EFC	<div style="width: 100%; height: 10px; background-color: green;"></div> 2/2	0	2
8CFCA0036372	<div style="width: 100%; height: 10px; background-color: green;"></div> 2/2	0	2
8CFCA0038A43	<div style="width: 100%; height: 10px; background-color: green;"></div> 2/2	0	2

## 6.Chapter Six System Management

### 6.1 Group structure

[Group structure] The module is used to manage the group structure and enterprise user information management in the enterprise. The hierarchical relationship is created and managed by admin or enterprise administrator.

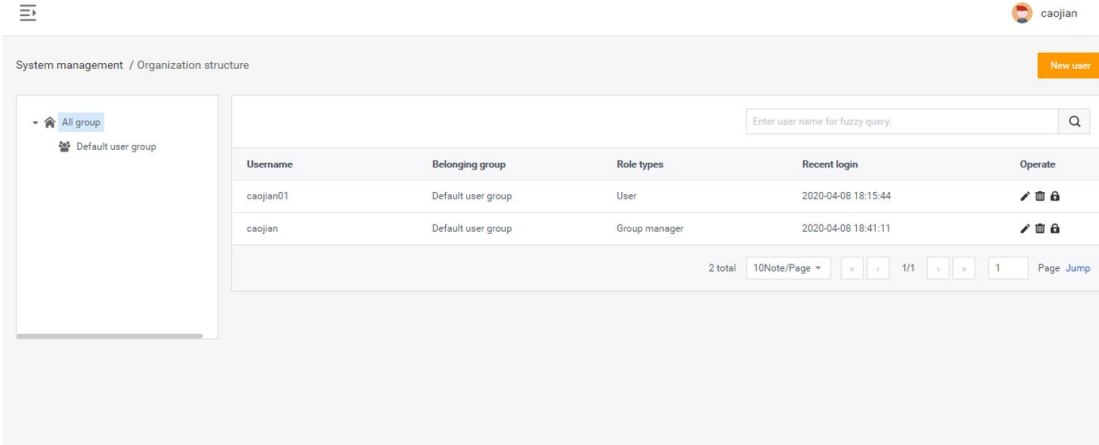

The screenshot displays the 'Organization structure' management interface. On the left, a sidebar shows a tree view with 'All group' and 'Default user group'. The main area features a search bar with the placeholder 'Enter user name for fuzzy query'. Below the search bar is a table listing users:

Username	Belonging group	Role types	Recent login	Operate
caojian01	Default user group	User	2020-04-08 18:15:44	
caojian	Default user group	Group manager	2020-04-08 18:41:11	


At the bottom of the table, there is a pagination control showing '2 total', '10Note/Page', and '1/1'.

#### 6.1.1 Attribution of business data

- Various business data generated by enterprise users will only be stored under the group structure group in the enterprise where they belong, and all business modules in the enterprise are grouped using the same group structure.
- In the same enterprise organization structure, users at a high level can access business data in a low-level structure. Conversely, low-level users cannot access high-level business data, and other companies cannot access this data.
- In the same enterprise group structure, business data between groups is visible within the group.
- An enterprise administrator can manage all business data in the organization structure of the enterprise, but cannot access data of other enterprises.

## 6.1.2 Group management

- Create a group: select a group and click **+** to enter the [New Group] page. On this page, you only need to fill in the group name and save it.
- **Modify and delete operations: (omitted)**
- Group permission description: visible in the default group

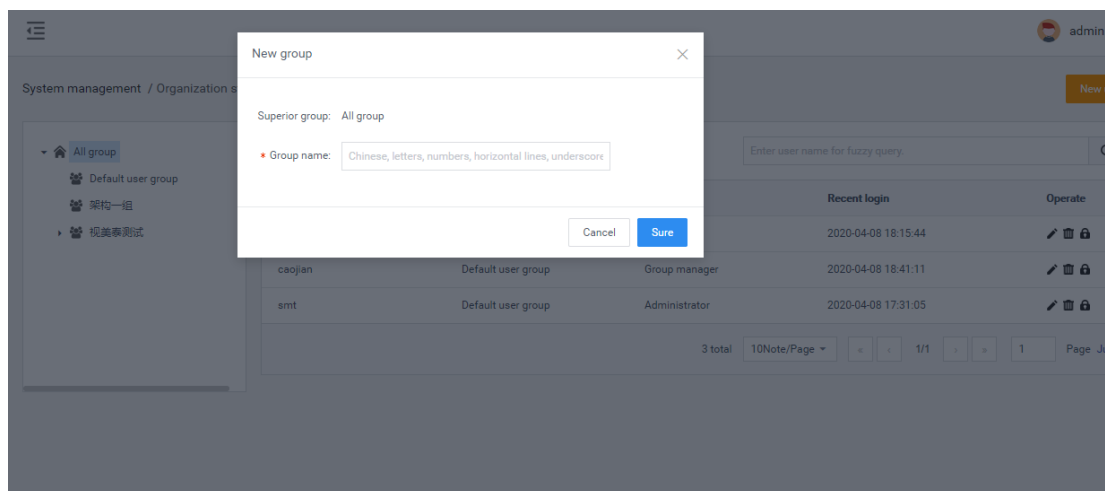

## 6.1.3 User management

- **User creation**

Click "Add User" to enter the [Add User] page. Select the group; fill in the user name and password; after confirming the password, group administrator and role, click "Submit", as shown below:

**Note:** By default, it is a normal user. After selecting a normal user, you need to select a role; if you select an administrator, you do not need to select a role to have all the permissions under this group.

System management / Organization structure / New user

All group

- Default user group

Username: Lowercase letters, numbers, horizontal lines, underscores and in 3-18 characters

Password: Letters, numbers, @, # (6 ~ 15 characters)

Confirm password: Please enter the password again.

Group administrator:  Yes  No

Role selection:  测试角色

Group selection: Please select a group from the left.

[Submit](#)

- **Modify, query, delete operations: (omitted)**
- **User password modification:** Note that only administrators (admin or company administrators) can reset passwords for users in the group. Reset the password to 123456.

System management / Organization structure

All group

- Default user group

Enter user name for fuzzy query.

Username	Belonging group	Role types	Recent login	Operate
caojian01	Default user group	User	2020-04-08 18:15:44	
caojian	Default user group	Group manager	2020-04-08 19:07:39	

2 total 10Note/Page 1/1 Page Jurr

Are you sure you want to reset your password?

Data cannot be recovered after reset. Please proceed cautiously!

[Cancel](#) [OK](#)

## 6.2 Role management

[Role management] It is used to create and manage roles. Roles are used to control various business function modules and function operations of users in the system. It is composed of different function operation rights.

- **Description of roles**
  - Each enterprise can create one or more roles with different permission scopes, which are used to perform different functions for different users in the enterprise group structure.

- Role information is independent between enterprises and cannot be accessed by each other.

Note: The role of admin is the system super administrator, which can manage all the functional modules and business data in the system. Among them, the functions of [System Settings] and [Enterprise Management] can only be managed by admin users, other users cannot see these two modules, including enterprise administrator users.

- **Role creation**

Go to [Permission Management]-[Role Management], click the "Add Role" button to enter the [Add Role] page.

System management / Role management / New role

\* Role name:

\* Role permissions:

- All permissions
- Device list
- Personnel list
- Visitor management
- Blacklist management
- Pass records
- Pass permission
- Blacklist monitoring
- Permission records
- System log

## 6.3 Business management

[Enterprise Management] The module can only be operated by the super administrator and is used to create and manage enterprise accounts in the system. Each corporate account has corporate administrator rights and can be used to log in to the system. After logging in to the system, the account can manage the organizational structure, users, and roles within the enterprise, and can view and manage all business data created by the enterprise users. But there is no operation authority for the [System Settings] and [Enterprise Management] functions, nor can you see the data of other enterprise users.

**Super administrators can create, modify, query, and delete enterprises, as shown in the following figure:**



System management / Business management New company

Enter company code for query.  Enter company name for query.

Company code	Company name	Administrator name	Phone number	Creation time	Operate
5512350078915751	视美泰测试	smt		2020-04-08 10:59:44	

1 total    1/1   1 Page Jump

**Note:** Enterprise delete operation is supported. After deleting an enterprise, all data associated with the enterprise will be deleted, and the devices under the enterprise will belong to the admin default group.

## 6.4 System log

[System Log] The system log list on the page contains the user's operation date, function modules, log details, operation results, operator and other information records during the use of the system.

System management / Operation log

The operation log only records important operations, not all user actions.

Functional module:  Operation result:

Start time:  End time:

Operation date	Functional module	Log details	Operation result	Operator
2020-04-08 19:07:39	Login	caojian, Login system	<span style="color: green;">●</span> Succeeded	caojian
2020-04-08 19:07:31	Login	admin, Login system	<span style="color: green;">●</span> Succeeded	admin
2020-04-08 19:07:02	Login	caojian, 登录系统	<span style="color: green;">●</span> Succeeded	caojian
2020-04-08 19:06:29	Login	admin, 登录系统	<span style="color: green;">●</span> Succeeded	admin
2020-04-08 19:04:39	Login	admin, Login system	<span style="color: green;">●</span> Succeeded	admin
2020-04-08 18:41:11	Login	caojian, 登录系统	<span style="color: green;">●</span> Succeeded	caojian
2020-04-08 18:30:17	Device management	修改设备名称, 从 8CFCA0038 A43666 改为 8CFCA0038A43	<span style="color: green;">●</span> Succeeded	admin
2020-04-08 18:30:11	Device management	修改设备名称, 从 8CFCA0038 A43 改为 8CFCA0038 A43666	<span style="color: green;">●</span> Succeeded	admin
2020-04-08 18:30:07	Device management	修改设备名称, 从 8CFCA0038A43 改为 8CFCA0038 A43	<span style="color: green;">●</span> Succeeded	admin
2020-04-08 18:28:58	Device management	修改设备名称, 从 3333344444555556 改为 8CFCA0038A43	<span style="color: green;">●</span> Succeeded	admin

104 total    1/1   1 Page Jump

## 6.5 System setting

The system settings provide several functions such as "background service port", "message service port" and "database service port configuration".

- 1) Support web service port configurable: background service port can be configured (between 9000-9999), the default is 9000; message service port can be configured (between 7000-7999), the default is 7788; database service port can be configured (Between 3000-3999), the default value is 3306, after setting, you need to restart the background to take effect.
- 2) System time;

System management / System settings

Version: MIPS\_GATE\_Basic\_v2.2.0

System current time: 2020-04-08 19:12:11

Backstage service port:   
9000~9999between

Message service port:   
7000~7999between

Database service port:   
3000~3999between

## 7.Chapter Seven Attendance Management

### 7.1 Attendance rules

[Attendance rules] Add, modify and delete related rules including shifts, holidays, public holidays, and device groups, etc. are set in this module.

Attendance management / Attendance rules

[Shift setting](#) [Holiday settings](#) [Public holiday settings](#) [Device group settings](#)

[+ New shifts](#)

Shift Name	Shift (work time-off time)	Number of people	Operate
Day shift	Shift 1:09:00~18:00	2	<a href="#">✎</a>

## 7.1.1 Shift settings

The shift setting contains a default shift. Click the new shift button to increase the shift. Click the modify shift icon in the operation to modify the parameters in the current shift. Click the delete shift icon in the operation to delete the current shift.

### ➤ New shift

Click the New shift button to open the new shift settings interface.

The screenshot shows the 'New shifts' configuration window. At the top, there is a 'Shift name' input field with a placeholder 'No more than 32 characters'. Below this is a 'Shift settings' section with a '+ Add' button and the text 'Add up to 4 shifts'. The main part of the interface is a table with columns: 'Time', 'Period', 'Notes', and 'Operate'. The table contains one row for 'Time1' with 'Work time: 09:00' and 'Off time: 18:00'. The 'Notes' column for this row contains 'Late 0 minutes is not late' and 'Earlier for 0 to leave is not leaving earlier.'. The 'Operate' column has a trash icon. Below the table are 'Overtime rules' with fields for 'Working hours are over 1 hours on weekdays and after work hours are later than 21:00 counting as overtime on working days.' and 'Public holiday / holiday work time is at least 1 minutes and work time is earlier than [ ] and work time is later than [ ] counting as overtime.' At the bottom right are 'Cancel' and 'Save' buttons.

#### ■ Shift name

- 1) The name can be customized to enter no more than 32 characters.

#### ■ Shift settings


- 1) The default is one shift. You can click the Add button to add shifts and set up to 4 shifts.
- 2) You can select / clear / customize the specific working / off time within the time period.
- 3) You can select and customize the minutes limit for late arrival and early departure in the notes.
- 4) Click the delete icon in the operation to delete this shift.

#### ● Overtime rules

- 1) You can manually enter and select the length of time required to work overtime on workdays and the time off work.
- 2) You can manually enter the length of time required for overtime on public holidays and holidays, as well as working time and off time.

## 7.1.2 Holiday settings

Click New holiday to customize the time period of various holidays. Click the Modify to modify the parameters of the currently set holiday. Click the delete to delete the current holiday.

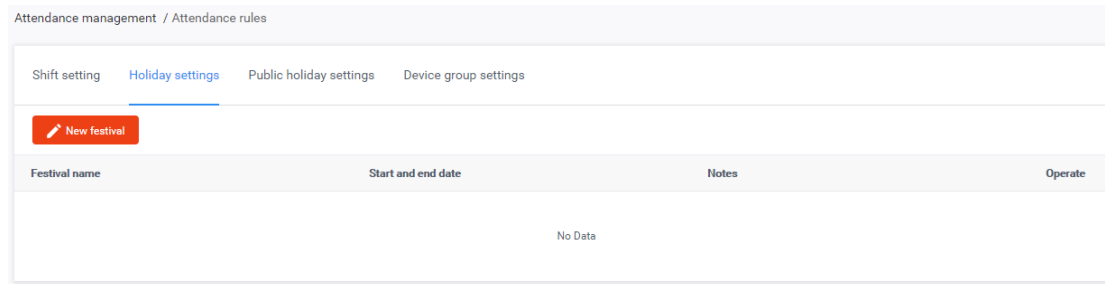

### ➤ New holiday

Click New holiday to open the new holiday interface.

#### ■ Holiday name

The name can be customized to enter no more than 32 characters.

#### ● Start date & end date

The start date and end date of the newly added holiday can be customized.

#### ● Notes



It can be customized to enter no more than 50 characters to explain the holiday.

## 7.1.3 Public holiday settings

You can customize the fixed weekly rest days (Monday to Sunday). Click the Modify to modify the parameters of the currently set public holiday. Click the Delete to delete the current public

holiday.

Attendance management / Attendance rules

Public holiday name	Off day	Operate
Official holiday	Sunday; Saturday	 

### ➤ **New public holiday**

Click New public holiday to open the interface.

**New public holidays** ✕

Name of public holiday:

Off day:

Sunday

Saturday

Friday

Thursday

Wednesday

Tuesday

Monday

- **Public holiday name**

1) The name can be customized to enter no more than 32 characters.

- **Off day**

1) You can select single or multiple choices from Monday to Sunday as a custom fixed weekly off day.

## 7.1.4 Device group settings

You can customize the new device group, and click the Modify to modify the device group information. Click the Delete to delete a set device group.

Attendance management / Attendance rules

Shift setting   Holiday settings   Public holiday settings   **Device group settings**

[New device group](#)

Device group name	Equipment quantity	Operate
Attendance group	3	
aassscc	0	

### ➤ **New device group**

Click New device group to open the interface.

**New device group** [X]

Device group name:

Select device: [Cancel edit](#)

- All group
- Default group
  - 8CFCA0036450
  - 8CFCA0064F96
  - 1CCAE33B8B39

[Cancel](#) [Save](#)

- **Device group name**

- 1) The name can be customized to enter no more than 32 characters.

- **Select device**

- 1) The "Cancel edit" button is displayed by default. At this time, you can check the devices in each group of the associated account. After clicking the "Cancel edit" button once, the display changes to "Edit button" and the device check box is grayed out and cannot be checked.

## 7.2 Attendance records

[Attendance records] The functions of this module include: query the attendance records of all employees by time period and group, track employees by attendance status, query the daily attendance within a custom time period by employee name and ID, and query the attendance of employees by date record and export the query result list file to download locally.

Attendance management / Attendance records

🏠 All group

👤 Default group

Attendance records

[Export](#)

Name	Date	Employee group	Employee ID	First clock on	not clock on	Body temperature	Status	Operate
s	2020-04-23	Default group	111				Absence	⊙
yg	2020-04-23	Default group	1				Absence	⊙
s	2020-04-22	Default group	111				Absence	⊙
yg	2020-04-22	Default group	1				Absence	⊙
s	2020-04-21	Default group	111				Absence	⊙
yg	2020-04-21	Default group	1				Absence	⊙
s	2020-04-20	Default group	111				Absence	⊙
yg	2020-04-20	Default group	1				Absence	⊙
s	2020-04-19 <span style="background-color: #90EE90; border-radius: 5px; padding: 2px;">Playday</span>	Default group	111					⊙
yg	2020-04-19 <span style="background-color: #90EE90; border-radius: 5px; padding: 2px;">Playday</span>	Default group	1					⊙

62 total  1/7 Page Jump

- **Employee grouping list**

1) In the list, the group name and group information are the same as the group data in [Employee list], which is synchronized in real time according to the data changes in the employee list. After selecting all groups, the attendance records of all employees are displayed on the right side of the interface. In the sub-group, only the attendance records of the employees in the group are displayed.

- **Attendance records list - Employee name, Employee ID, Employee group**

1) Display the name of the employee and the corresponding employee ID and employee group.

- **Attendance record list - Date**

- 1) By default, the attendance record date of the day before the query date is displayed.
- 2) If the day's date belongs to a custom holiday, the "Holiday" icon will be displayed to the right of the date.
- 3) If the current day belongs to a custom public holiday, the "Off" icon will be displayed to the right of the date.
- 4) If today's date belongs to a customized holiday and public holiday, the "Off" and "Holiday" icons will be displayed on the right side of the date.

- **Attendance - First clock on, Last clock on**

1) The employee's first attendance is displayed in the first clock on, and the employee's last attendance is recorded in the last clock on. If the employee was not in attendance that day, no data will be displayed.

- **Attendance - Status**

- 1) If the employee commutes normally within the specified time during the day, the status bar will not display the mark.
- 2) If the employee's attendance record is normal within the specified time, no mark is displayed in the status bar.
- 3) If the employee leaves early at the end of the day, the status bar marks early departure.
- 4) If the employee is absent from the day, the absence is marked in the status bar.
- 5) If the employee has overtime that day, the overtime mark will be displayed in the status bar.

6) If multiple marking conditions are met at the same time, the status bar will display multiple markings at the same time.

- **Attendance records list - Operate**


1) You can enter the Pass management - Pass record page to view the employee's attendance details for the day.

- **Search bar**

1) Enter the employee name or employee ID in the search box and click the "Enter" to query the employee's attendance record.

- **Range search**

1) Click the arrow button to the right of the search box to open the Range search interface.

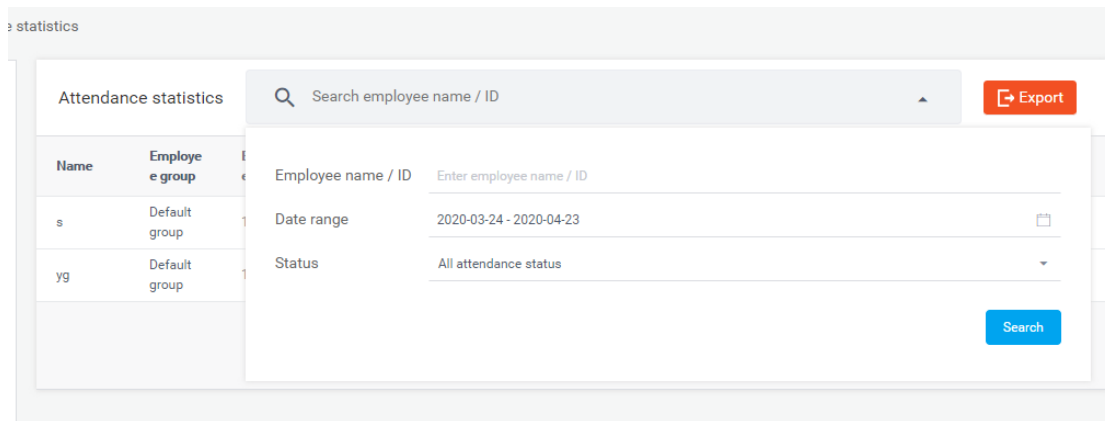

- ✧ The attendance status selects all by default. If you do not enter the date range and employee name, you can query the current month attendance records of all employees.
- ✧ Attendance status can be manually selected separately for normal, late, early leave and absent. You can also customize the input or select the date and employee name / ID for a combined query within the specified range.

- **Export**

1) Click the export button to download the employee attendance record form of the current query page to the local.

- **Turn page**

1) By default, 10 attendance records are displayed on each page. You can manually click to select 15/20/25/50/100 records.

2) You can click the previous page and next page buttons to view the record. Click the first page and the last page to jump directly to the first page or the last page to view the record. After entering numbers in the page number input box, click Jump to jump directly to this page to view the record.

## 7.3 Attendance statistics

This module can query or export the data of normal and abnormal attendance of employees at all times and within a specified range of time; working days, public holidays and overtime data on holidays.



Attendance management / Attendance statistics

Home All group

Default group

Attendance statistics

[Export](#)

Name	Employee group	Employee ID	Normal days	Late days	Leave-early days	Absence days	Overtime on working day	Overtime on public holiday	Overtime on holiday	Operate
e	Default group	111	0	0	0	23	-	-	-	
yg	Default group	1	0	0	0	23	-	-	-	

2 total  1/1  Page Jump

- **Employee group list**

1) In the employee group list, the group name and group information are the same as the group data in the [Employee list], and the data changes in the Employee list are synchronized in real time. After all groups are selected, the attendance statistics of all employees will be displayed on the right side of the interface. The sub-grouping only displays the employee attendance statistics of the group.

- **Attendance statistics list - Employee name, Employee ID, Employee group**

1) Display the name of the employee and the corresponding employee ID and employee group.

- **Attendance statistics list-normal days, late arrivals, early departures, absences**

1) By default, the statistics of the current month of the query date are displayed. The employee's normal days, late arrivals, early departures, and absences will be displayed. If there is no record in the query time range, it will be displayed as 0.

- **Attendance statistics list - Overtime on working days, Overtime on public holidays, Overtime on holidays**

1) By default, the statistics of the current month of the query date are displayed. It will display the total number and hours of employees working overtime on working days, public holidays and holidays. If there is no record in the query time range, it will be displayed as "-".

- **Attendance statistics list - Operate**

1) Click the Attendance record icon on the left side of the interface to enter the Attendance management - Attendance record page to view the employee's attendance record for the day.  
 2) Click the Attendance record icon on the right side of the interface to enter the Pass management - Pass record page to view the employee's attendance details for the day.

- **Search bar**

1) Enter the employee name or employee ID in the search box and click "Enter" to query the employee's attendance data.

- **Range Search**

1) Click the arrow button to the right of the search box to open the range search interface.

- ✧ The attendance status is selected as all by default. If you do not enter the date range and employee name, the default is to query the attendance data of all employees in the current month.
- ✧ Attendance status can be manually selected separately for normal, late, early leave and absent. You can also customize the input or select the date and employee name / ID for a combined query within the specified range.

- **Export**

1) Click the export button to download the employee attendance record form of the current query page to the local.

- **Turn page**

1) By default, 10 attendance records are displayed on each page. You can manually click to select 15/20/25/50/100 records.

2) You can click the previous page and next page buttons to view the record. Click the first page and the last page to jump directly to the first page or the last page to view the record. After entering numbers in the page number input box, click Jump to jump directly to this page to view the record.


## 8. Chapter Eight Client Functions

### 8.1 Client login

- **Steps:**

1) After opening the application on the device, click the middle mouse button to pop up the password input box and enter the default password: 123456 to enter the settings page.

2) Click Login Management to enter the login interface. Enter the same account password as the web page to log in.

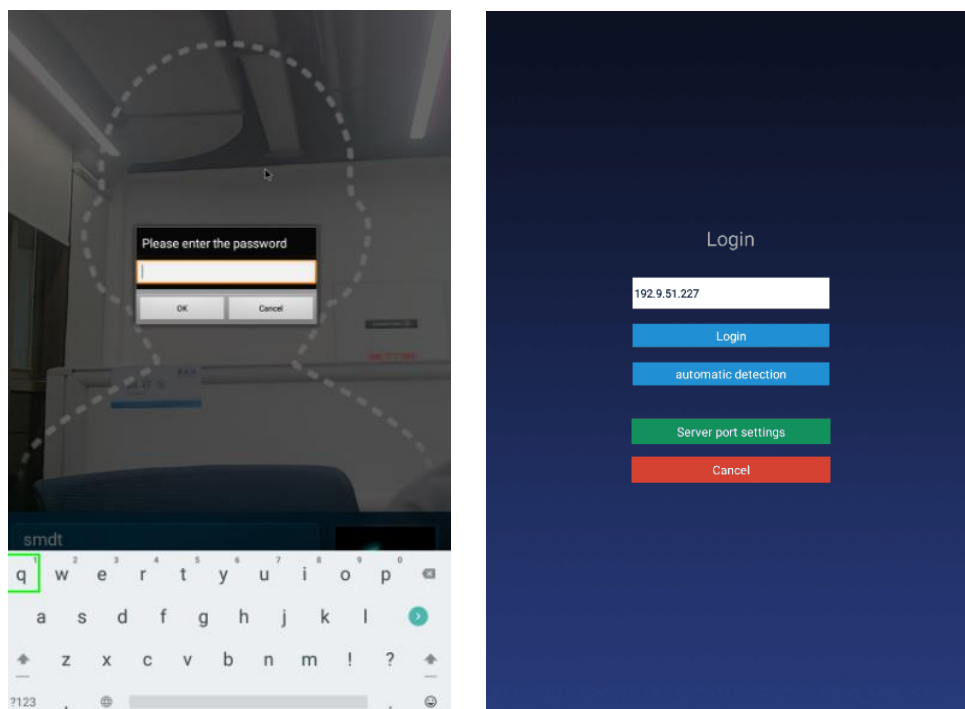

Note: You need to enter the set device password before entering the login management, after logging into the application settings and before exiting the application. The password can be set in the "Parameter setting" in the [Device management] on the backstage web page, or can be modified in the "App Password Settings" in the terminal application settings.

- **Application management**

After successful login, click the middle mouse button to open the [Application management] interface. The current page displays the login information: local name, local IP, connected server, current login status, and login management, application settings, face entry, application Six functions of information, pass record and face database.

- **Login management**

After logging in, you can click "Sign out" to log out of the current account.


## 8.2 Application settings

Enter the [Application settings] page, which contains the following function settings:



## 8.2.1 Device name setting

By default, the device name is the MAC address of the device, which can be modified manually. After being logged in, it will be synchronized to the background after modification, and can also be set in the "device details" in the [device management] of the background web page;

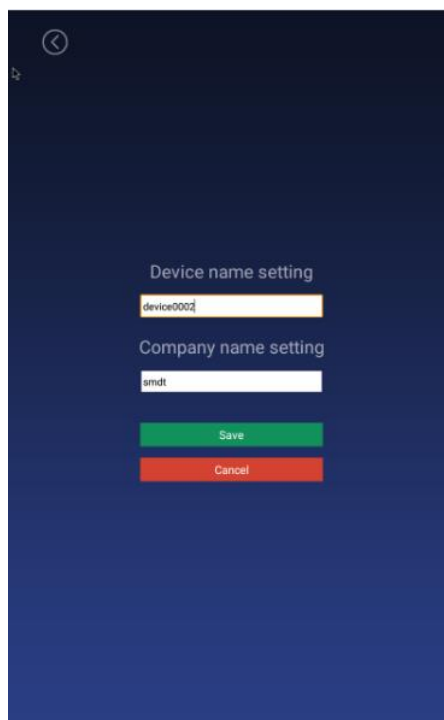

## 8.2.2 Body temperature setting

- **Body temperature detection switch**

- 1) Control body temperature detection function. You can choose to turn on or off, the default is on.
- 2) **On**: During the identification of personnel traffic, the interface will display and broadcast the body temperature value after the face is recognized.
- 3) **Off**: During the recognition of personnel traffic, the outline of the face in the interface is automatically hidden. The interface will not detect body temperature after the face is recognized.

- **Compensation temperature**

- 1) When the ambient temperature may affect the detected body temperature, the compensation temperature can be set to adjust automatically.
- 2) The compensation temperature value defaults to 0.3, and the setting range is 0 ~ 1, and a maximum of one decimal can be reserved; "compensation +" is selected by default.  
Example: Compensation +0.3 degrees, the problem is 36.1 during identification, then 36.4 is displayed.

- **Alarm threshold**


Set an alarm threshold to control body temperature detection. When the body temperature alarm is turned on, if the identified body temperature exceeds the threshold and an alarm is issued. The default is 37.3, and only numbers between 30.0 and 45.0 can be entered, and up to one decimal can be reserved.

- **Body temperature alarm**

- 1) Control body temperature alarm function. You can choose on or off, the default is on.
- 2) **On**: When the detected body temperature is higher than the threshold, the interface displays the body temperature and emits an alarm sound; if the body temperature is lower than the threshold, there will be no alarm.
- 3) **Off**: No matter the body temperature is high or low, there will be no alarm.

- **Mask detection**

- 1) Control the mask detection function. You can choose to turn on or off this function, the default is off.
- 2) **On**: Recognize without wearing a mask. After recognition, the display style is a red background. Access is prohibited. Please wear a mask. The voice broadcast "Please wear a mask"; wearing a mask can be recognized normally.
- 3) **Off**: Does not detect whether a mask is worn during recognition.

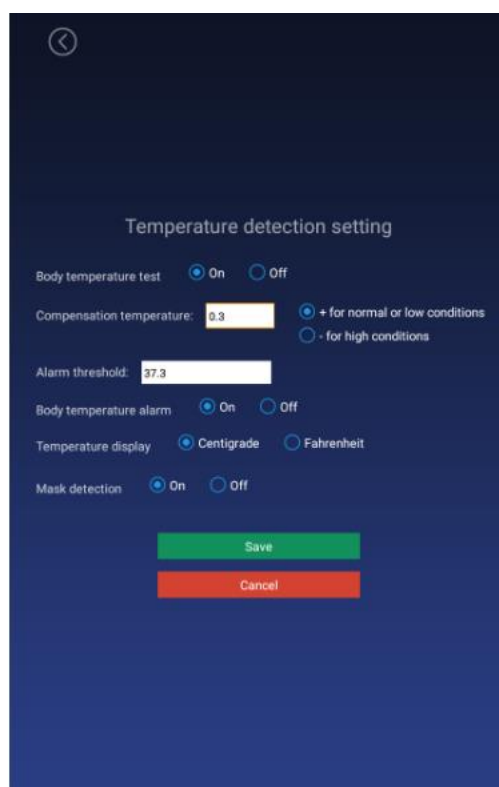

### 8.2.3 Identification parameter setting

- **Test threshold**


It is used when checking the pictures into the warehouse. The higher the threshold is set, the lower the requirements on the pictures. It needs to be set reasonably. The default value is 17.

- **Number of recognition**

The number of times to identify whether a person is an already-entered person, the default value is 3.


- **Living portrait detection**

Whether to enable live detection when recognizing personnel can be set to on or off, and the default value is off.

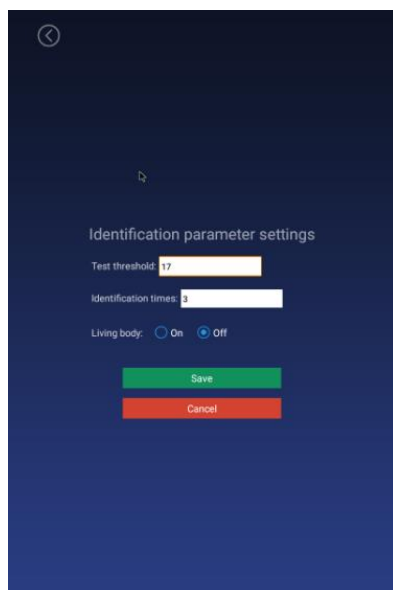

## 8.2.4 Volume setting

While logged in, the volume setting of the synchronization server can also be set locally.

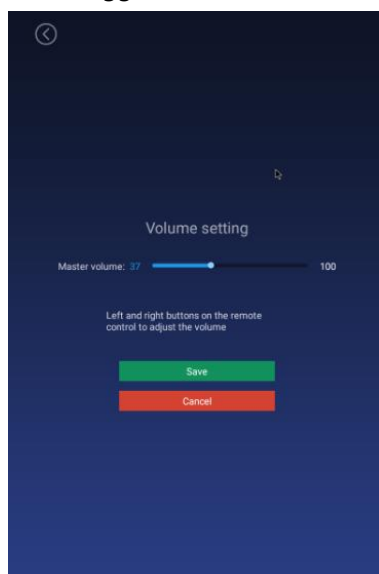

## 8.2.5 Start-up settings

- **Auto-star**


The application will start automatically when it is turned on, and it will not start when it is turned off.

- **Application daemon**

The application will automatically jump back to the playback interface within 30 seconds after opening the application page when opening, and not automatically when closing.


- **Application thread guard**

When the camera is turned on, an abnormality occurs and the camera restarts.

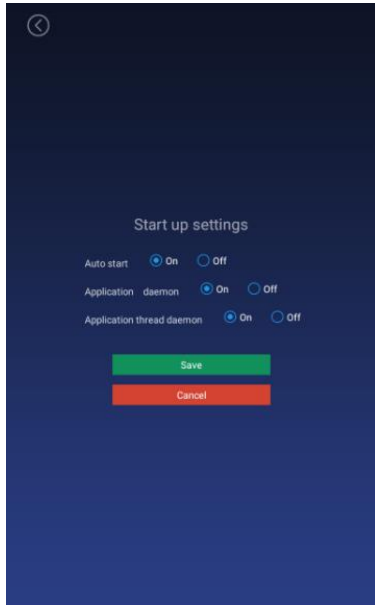

## 8.2.6 Application information settings

After setting, the camera displays or hides the bottom information bar in full-screen display; default: display, which can be set to show or hide.

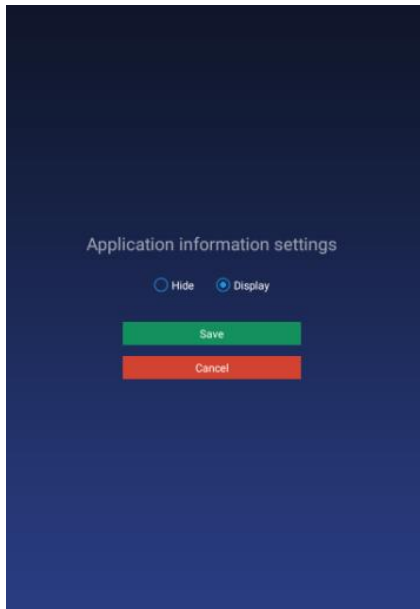


## 8.2.7 Recognition effect display

Set the effect of face recognition, including the display when the recognition is successful (the default value displays the image) / when the recognition fails (the default value is turned on the




red light), the fill light display (the default value of the three-color light), as shown in the figure:

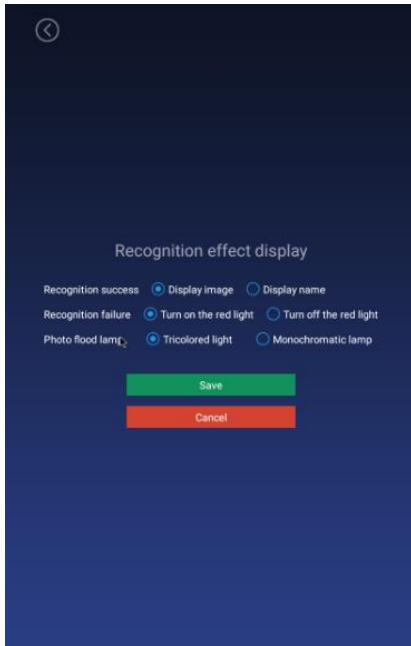


## 8.2.8 Application password settings

- 1) Enter the login management, enter the application settings after login, and exit the application before you need to enter the set device password, the initial password: 123456.
- 2) The password can also be set in the "Parameter Setting" of [Device Management] on the background web page.
- 3) Enter the original password, new password, confirm the new password, and save it to modify the password; the password length limit: 1-6 digits, can not be set to blank.

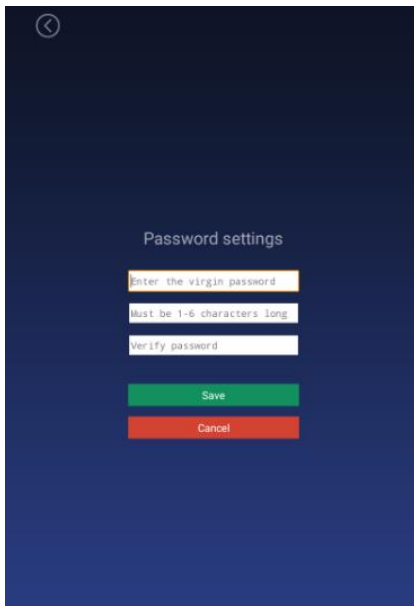

## 8.2.9 Camera preview resolution setting

Set the camera resolution when performing face recognition. The default value is 1280 \* 720.

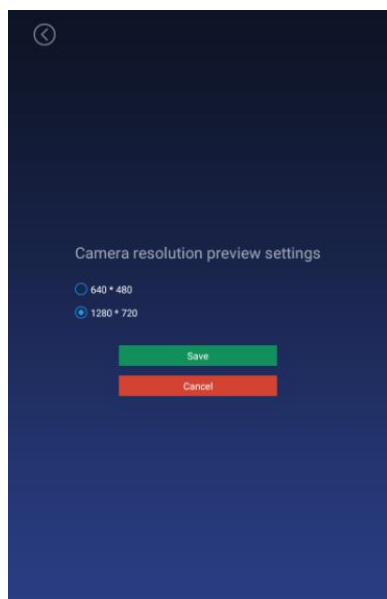

## 8.2.10 Screen-saver brightness setting


- **Screen-saver**

1) When face recognition is not required, a screen-saver is required. After recognizing a face, jump to the home page.

2) The app starts to display the homepage, there is a face recognition homepage within 30s, and no face recognition screen-saver within 30s.


- **Screen-saver brightness setting**

Adjust the brightness value displayed on the screen saver, drag the set value, and save it.

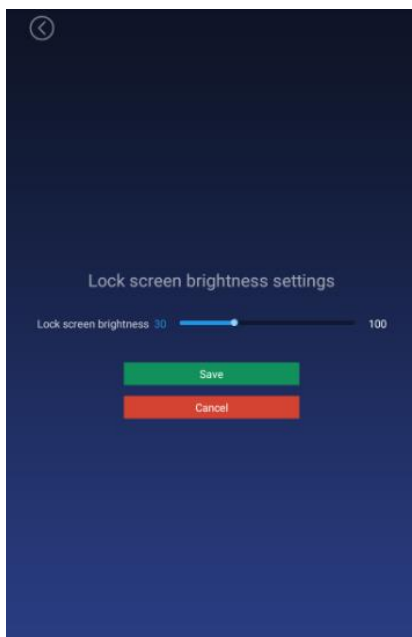

## 8.2.11 Device restart time setting

Set the device restart time: hour-minute (default value 03:00) and 24-hour system. If you choose to restart, the device will automatically restart at the selected restart time. If you choose not to restart, it will not restart. The default value is to restart.

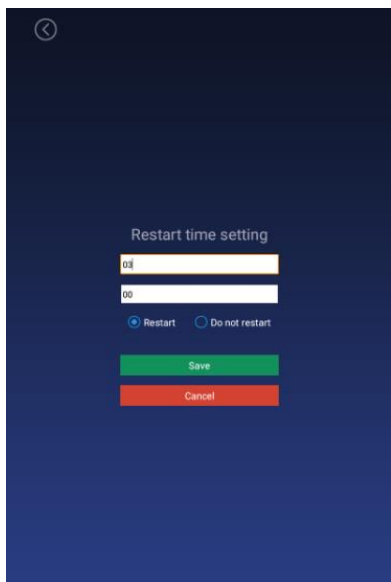

## 8.2.12 Relay settings


- **Relay mode:**

0: indicates no automatic closing mode, that is, it will not automatically close after opening the relay, the default value.

1: Indicates automatic closing mode (high effective-default low level, then high level for X seconds, and finally low level). That is, after opening the relay, a delay of X seconds will automatically close.

2: Indicates auto-close mode (active low-default low level, then high level for X seconds, and finally low level). That is, after opening the relay, a delay of X seconds will automatically close.

**Delay time:** The default unit is 5 seconds and the maximum value is 63 seconds.

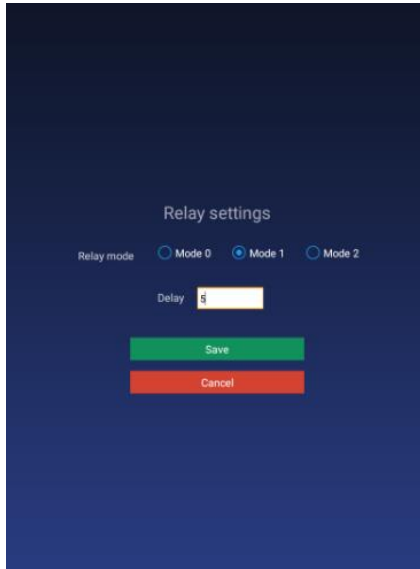


## 8.2.13 Others

- **Upgrade firmware of temperature module**

The firmware of the temperature measurement module can be manually upgraded through application settings. First insert the U disk, and then enter the temperature measurement module upgrade function of the application settings to select the firmware that can be upgraded for manual upgrade. After the upgrade, you can view the version number of the new firmware of the temperature measurement module. (The firmware file needs to be placed in the root directory of the U disk, and the file name must be **updateTemp.bin**)


- **Callback settings**

- 1) This setting includes on and off.
- 2) On: You need to enter the callback address, the callback address is implemented according to the callback interface document provided by us.
- 3) Off: The callback function is turned off, the recognition record is not callback.

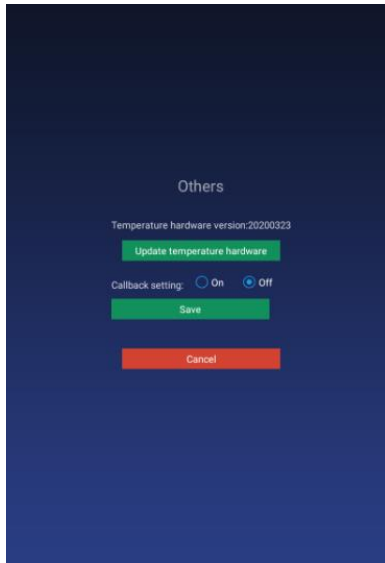

## 8.2.14 Application initialization

The application initialization function will clear all data in the application and restore it to its initial state, including user login information, entered face information, access records, and settings in the application settings.

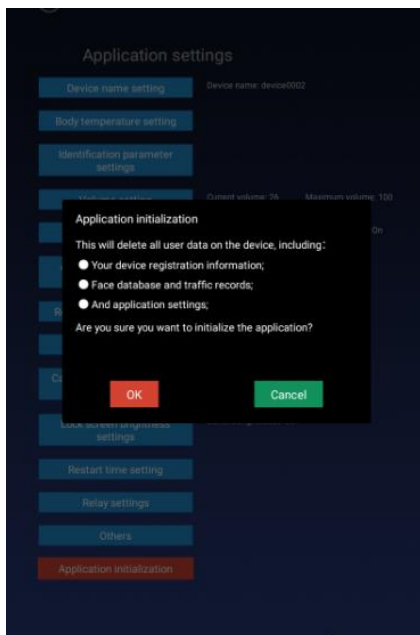


## 8.3 Face portrait entry

You can enter personnel information locally, collect faces, enter employee ID, name, gender, and save. After the entry is successful, it will be synchronized to the background; after the face is collected, the picture will be verified and the verification result will be displayed.


## 8.4 Personnel import in bulk

In addition to a single entry method, you can also import personnel to the client in batches via a U disk. The import method adopts excel format and folder method. The detailed operation steps are as follows:

 1. Create importVip directory with U disk.



2. Put the excel file in the importVip directory, please refer to the template file for the excel template. Note that excel 2003 is used and can only exist in one excel file.

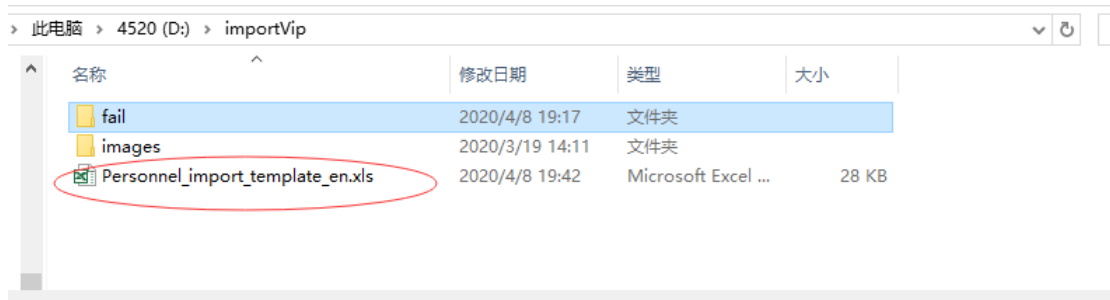

3. Create an images directory to store the face photos of the people to be imported. The photo name is the employee ID of the excel form, and the photo supports png or jpg format.

### Instructions:

1. Personnel ID: required; cannot be repeated; and in 0-10 characters, such as 0000000001
2. Name: required; in 0-32 characters, consisting of Chinese, English or numbers
3. Gender: optional; select "Male" or "Female"
4. Belonging group: required; must be a group that already exists in the system; The subgroups are separated by "-", and the format is "All group-subgroups-subgroups".
5. Phone number: required; cannot be repeated; Chinese phone numbers are filled in according to the length rules of domestic mobile phone numbers; Other countries' phone num
6. Other ID: optional; cannot be repeated; in 15 or 18 characters, and the character type is number or letter
7. Email: optional; cannot be repeated; in 0-32 characters, no limitation on character types
8. IC card: optional; cannot be repeated; in 0-64 characters, no limitation on character types
9. Native place: optional; in 0-64 characters, no limitation on character types
10. Date of Birth: optional; the format is "xxxx-xx-xx", and not possible to enter a future date
11. Address: optional, in 0-128 characters, no limitation on the character types
12. Notes: optional, in 0-128 characters, no limitation on the character types


Personnel ID	Name	Gender	Belonging group	Phone number	Other ID	Email	IC card	Native place	Date of Birth
52300777	John c	Male	All group-Default group	+8613424319358	430481199022202375	<a href="mailto:aff@gmail.com">aff@gmail.com</a>	000230001212	London	05-Dec-80
0000000002	Jane Doe	Female	All group-Default group	+8613424319359	430481199022200476	<a href="mailto:ygs@gmail.com">ygs@gmail.com</a>	000570003321	London	06-Feb-90

importVip images 搜索 images



帮助(H)

名称	修改日期	类型	大小
1.jpg	2019-11-13 10:06	JPG 文件	256 KB
2.jpg	2019-10-12 17:33	JPG 文件	221 KB
3.jpg	2019-11-13 11:01	JPG 文件	192 KB
4.jpg	2019-11-13 10:47	JPG 文件	260 KB
5.jpg	2019-11-13 10:10	JPG 文件	270 KB
7.jpg	2019-11-13 10:08	JPG 文件	205 KB
8.jpg	2019-11-13 10:31	JPG 文件	275 KB
9.jpg	2019-11-13 10:29	JPG 文件	285 KB
10.jpg	2019-11-13 10:37	JPG 文件	278 KB
11.jpg	2019-11-13 11:04	JPG 文件	230 KB
13.jpg	2019-11-13 10:07	JPG 文件	261 KB
15.jpg	2019-11-13 10:59	JPG 文件	299 KB
16.jpg	2019-11-13 10:37	JPG 文件	252 KB
17.jpg	2019-11-13 10:26	JPG 文件	217 KB
19.jpg	2019-11-13 10:58	JPG 文件	252 KB

4. Insert the USB port of the device after it is created and import it automatically. The current total number of imported people, successful people and failed people will be displayed.

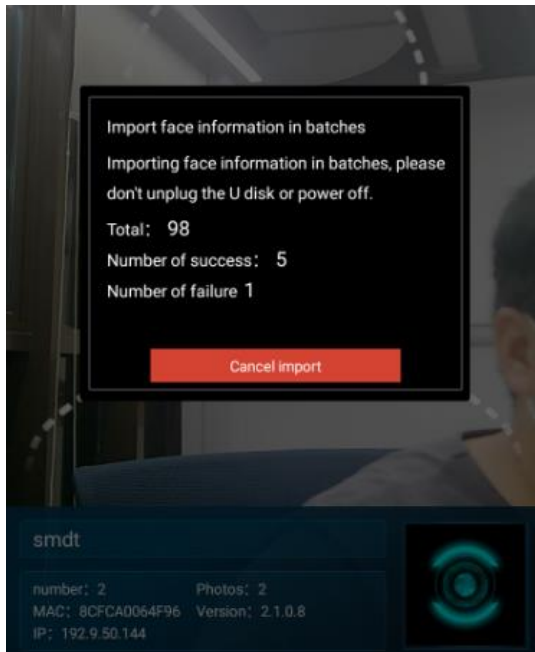

5. After the import is completed, a fail folder will be created under the importVip directory, and a description of the reason for the import failure will be generated.

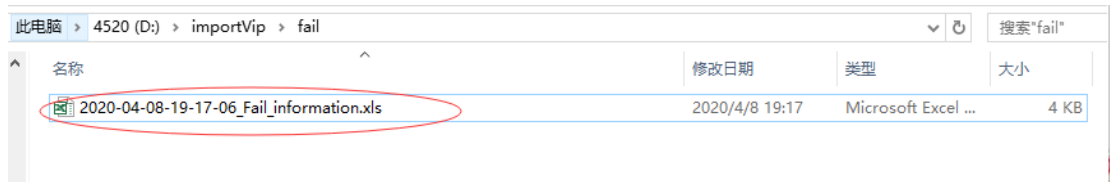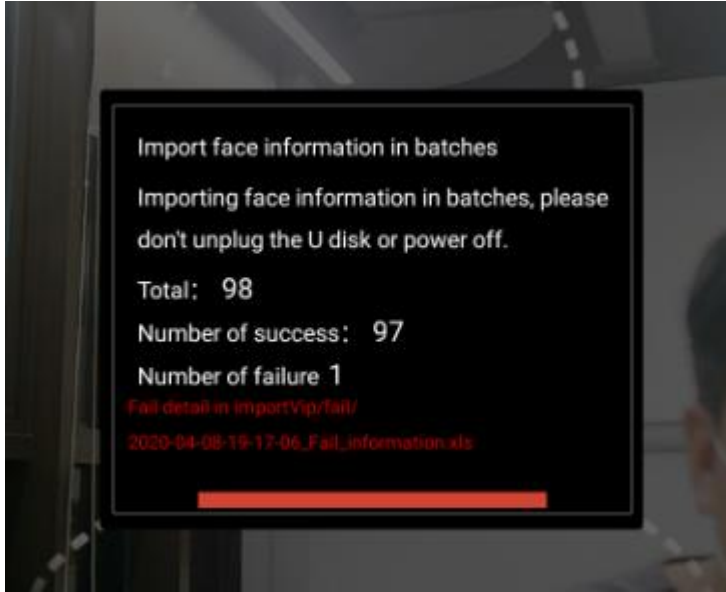

## 8.5 Pass records


By default, the travel records of the current day are displayed, and the data of the travel records can be queried and exported by day (the data of the current day is displayed by default, and the export record needs to be inserted into a U disk). The name, identity, time of passage, temperature and snapshot of the passage will be displayed.






## 8.6 Application information

Display application and terminal system related information, as shown below:

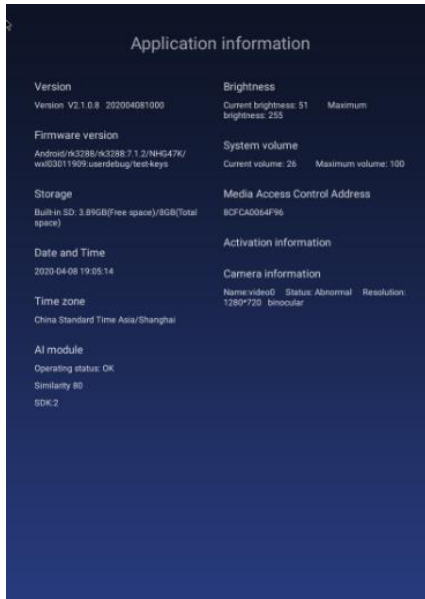

## 8.7 Face database


The face database page can view the face database information of the current device. The list will display the name, identity, expiration date, type and pictures. Records can be deleted, and local personnel can also be uploaded to the background.

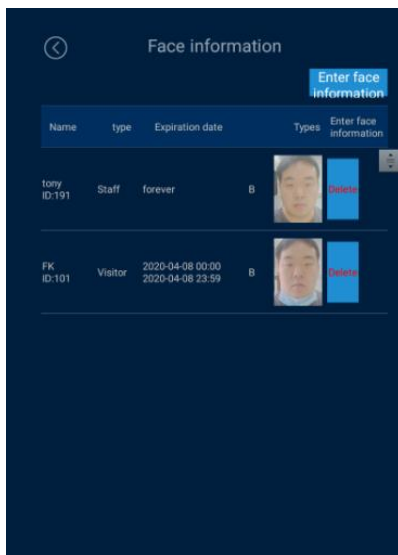

## 8.8 Identify the home page

- Homepage description

- 1) The top information bar: The time information bar will automatically synchronize the server time and day of the week.
- 2) Camera screen: The camera screen is displayed in full screen, and the recognition result is displayed when passing through.
- 3) The bottom information bar: The company name, number of people, photo, MAC address, IP address and version number will be displayed.
  1. Company name: The default is to set the company name, which can be set through the background.
  2. Number of people and photo information: The number of people refers to the total number of people in the device, and the number of photos is the number entered in the face database, which changes automatically after synchronizing data.
  3. MAC address: It is the mac address information of the current device.
  4. Version number: the current version number of the client.
  5. IP address: It is the current IP of the client. If there is no address, the display is blank, and the address needs to be displayed dynamically.

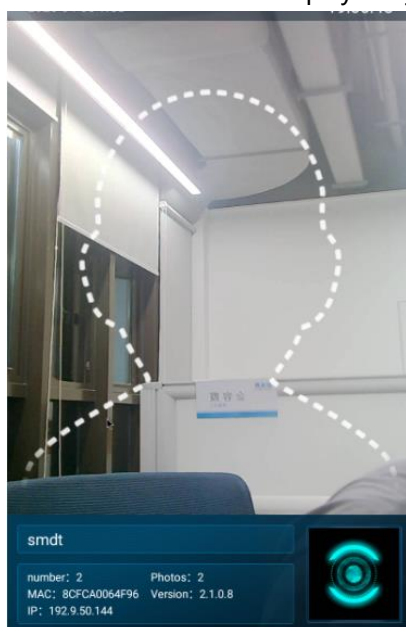

- **Pass recognition**

It can be identified based on the person's identity. You can also check the body temperature of the identified person, whether to wear a mask, and display the identification results.

## 8.9 Others

- **Person & Paper Comparison**

The client accesses the ID card to identify the peripherals, and the device ID is set to "Person & Paper comparison". Swipe the ID card on the peripheral device. When the ID card matches the currently recognized person, the gate will be opened.

- **Client languages**

The English version has been adapted. After exiting the client, the system language is set to English, and the interface automatically changes to the English version after entering the

application.

## 9.0 Wiring Diagram

- **External Card Reader**

For an external card reader, the D0/D1 and GND from the reader attach to the Weigand IN on the TDT-8, the D0/D1 and GND to the controller connects to the Weigand OUT on the TDT-8.

The circuit will close on a passed temperature scan and/or facial recognition admittance depending on the settings of the device. At that time, the card reader is 'active' ( a card can be presented for access) for the duration of the relay timer. The default is 5 which is ~ 2 seconds. The range is 1-63 which equates to 0.4 - 32 seconds.

